

IMAGESAFE

WINDOWS API SPECIFICATIONS

PROGRAMMING REFERENCE MANUAL

MANUAL PART NUMBER 99875500-4

APRIL 2012

MAGTEK®
REGISTERED TO ISO 9001:2008
1710 Apollo Court
Seal Beach, CA 90740
Phone: (562) 546-6400
Technical Support: (651) 415-6800
www.magtek.com

Copyright[©] 2004 – 2012

MagTek[®], Inc.

Printed in the United States of America

Information in this document is subject to change without notice. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of MagTek, Inc.

MagTek is a registered trademark of MagTek, Inc.

ImageSafeTM is a trademark of MagTek, Inc.

Microsoft[®] is a trademark of Microsoft, Inc.

REVISIONS

Rev Number	Date	Notes
1.01	15 Mar 2010	Initial Release
2.01	17 Jun 2010	Removed ScanLED1, ScanLED2, ChecksRead, DocsRead, CardsRead, CardsScanned, HoursOp, HoursOn, InkUsed, frontInkUsed, Color, ManualFeeder, AutoFeeder, IDFeeder, Lamp1, Lamp2, Ink, FrontInk, Printer, FrontPrinter, RTCBattery, AccessGuide. Added Threshold, Quality, ResponseType
3	5 Apr 2011	Added MTMICRSetConfigFile function and error codes 67, 68, 69, and 70.
4	16 Apr 2012	Updated MagneSafe MSR info for clarification

SOFTWARE LICENSE AGREEMENT

IMPORTANT: YOU SHOULD CAREFULLY READ ALL THE TERMS, CONDITIONS AND RESTRICTIONS OF THIS LICENSE AGREEMENT BEFORE INSTALLING THE SOFTWARE PACKAGE. YOUR INSTALLATION OF THE SOFTWARE PACKAGE PRESUMES YOUR ACCEPTANCE OF THE TERMS, CONDITIONS, AND RESTRICTIONS CONTAINED IN THIS AGREEMENT. IF YOU DO NOT AGREE WITH THESE TERMS, CONDITIONS, AND RESTRICTIONS, PROMPTLY RETURN THE SOFTWARE PACKAGE AND ASSOCIATED DOCUMENTATION TO THE ABOVE ADDRESS, ATTENTION: CUSTOMER SUPPORT.

TERMS, CONDITIONS, AND RESTRICTIONS

MagTek, Incorporated (the "Licensor") owns and has the right to distribute the described software and documentation, collectively referred to as the "Software".

LICENSE: Licensor grants you (the "Licensee") the right to use the Software in conjunction with MagTek products. LICENSEE MAY NOT COPY, MODIFY, OR TRANSFER THE SOFTWARE IN WHOLE OR IN PART EXCEPT AS EXPRESSLY PROVIDED IN THIS AGREEMENT. Licensee may not decompile, disassemble, or in any other manner attempt to reverse engineer the Software. Licensee shall not tamper with, bypass, or alter any security features of the software or attempt to do so.

TRANSFER: Licensee may not transfer the Software or license to the Software to another party without the prior written authorization of the Licensor. If Licensee transfers the Software without authorization, all rights granted under this Agreement are automatically terminated.

COPYRIGHT: The Software is copyrighted. Licensee may not copy the Software except for archival purposes or to load for execution purposes. All other copies of the Software are in violation of this Agreement.

TERM: This Agreement is in effect as long as Licensee continues the use of the Software. The Licensor also reserves the right to terminate this Agreement if Licensee fails to comply with any of the terms, conditions, or restrictions contained herein. Should Licensor terminate this Agreement due to Licensee's failure to comply, Licensee agrees to return the Software to Licensor. Receipt of returned Software by the Licensor shall mark the termination.

LIMITED WARRANTY: Licensor warrants to the Licensee that the disk(s) or other media on which the Software is recorded are free from defects in material or workmanship under normal use.

THE SOFTWARE IS PROVIDED AS IS. LICENSOR MAKES NO OTHER WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Because of the diversity of conditions and PC hardware under which the Software may be used, Licensor does not warrant that the Software will meet Licensee specifications or that the operation of the Software will be uninterrupted or free of errors.

IN NO EVENT WILL LICENSOR BE LIABLE FOR ANY DAMAGES, INCLUDING ANY LOST PROFITS, LOST SAVINGS, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE, OR INABILITY TO USE, THE SOFTWARE. Licensee's sole remedy in the event of a defect in material or workmanship is expressly limited to replacement of the Software disk(s) if applicable.

GOVERNING LAW: If any provision of this Agreement is found to be unlawful, void, or unenforceable, that provision shall be removed from consideration under this Agreement and will not affect the enforceability of any of the remaining provisions. This Agreement shall be governed by the laws of the State of California and shall inure to the benefit of MagTek, Incorporated, its successors or assigns.

ACKNOWLEDGMENT: LICENSEE ACKNOWLEDGES THAT HE HAS READ THIS AGREEMENT, UNDERSTANDS ALL OF ITS TERMS, CONDITIONS, AND RESTRICTIONS, AND AGREES TO BE BOUND BY THEM. LICENSEE ALSO AGREES THAT THIS AGREEMENT SUPERSEDES ANY AND ALL VERBAL AND WRITTEN COMMUNICATIONS BETWEEN LICENSOR AND LICENSEE OR THEIR ASSIGNS RELATING TO THE SUBJECT MATTER OF THIS AGREEMENT.

QUESTIONS REGARDING THIS AGREEMENT SHOULD BE ADDRESSED IN WRITING TO MAGTEK, INCORPORATED, ATTENTION: CUSTOMER SUPPORT, AT THE ABOVE ADDRESS, OR E-MAILED TO support@magtek.com.

TABLE OF CONTENTS

SECTION 1. OVERVIEW	1
REQUIREMENTS	1
SECTION 2. IMAGESAFE SOFTWARE ARCHITECTURE.....	3
API FUNCTIONS.....	3
SOFTWARE FLOW FOR CHECK PROCESSING	4
HOW TO PROCESS DOCUMENT USING IMAGESAFE API	5
HOW TO GET CHECK IMAGES	6
PROCESS OPTIONS	6
ERROR REPORTING	6
DEBUGGING API.....	6
SECTION 3. IMAGESAFE API	7
MTMICRGetDevice	7
Parameters	7
Return Values.....	7
Remarks	7
Example	7
MTMICROpenDevice	8
Parameters	8
Return Values.....	8
Remarks	8
Example	8
MTMICRCloseDevice	9
Parameters	9
Return Values.....	9
Remarks	9
Example	9
MTMICRSETVALUE	10
Parameters	10
Return Values.....	10
Remarks	10
Example	11
MTMICRSetIndexValue	11
Parameters	11
Return Values.....	11
Remarks	12
Example	12
MTMICRGetValue	12
Parameters	12
Return Values.....	12
Remarks	13
Example	13
MTMICRGetIndexValue	14
Parameters	14
Return Values.....	14
Example	15
MTMICRQueryInfo	15
Parameters	16
Return Values.....	16
Remarks	16
Example	16
MTMICRSendCommand	17
Parameters	17
Return Values.....	17
Remarks	17
Example	18
MTMICRProcessCheck	18
Parameters	18
Return Values.....	19
Remarks	19
Example	19

MTMICRGetImage	20
Parameters	20
Return Values.....	20
Remarks	21
Example	21
MTMICRGetImages	22
Parameters	22
Return Values.....	23
Remarks	23
Example	24
MTMICRGETSECTIONCOUNT.....	24
Parameters	25
Return Values.....	25
Remarks	25
Example	25
MTMICRGetSectionName	26
Parameters	26
Return Values.....	26
Remarks	26
Example	27
MTMICRGetKeyCount	27
Parameters	28
Return Values.....	28
Remarks	28
Example	29
MTMICRGetKeyName	30
Parameters	30
Return Values.....	30
Remarks	31
Example	31
MTMICRSetTimeout.....	32
Parameters	32
Return Values.....	32
Example	32
MTMICRGetTimeout	33
Parameters	33
Return Values.....	33
Example	33
MTMICRLogEnable.....	34
Parameters	34
Return Values.....	34
Example	34
MTMICRSetLogFileHandle	34
Parameters	34
Return Values.....	34
Example	35
MTMICRSETLOGLEVEL	35
Parameters	35
Return Values.....	36
Example	36
Remarks	36
MTMICRCOMInitialize	36
Parameters	36
Return Values.....	36
Example	36
MTMICRCOMUnInitialize	37
Parameters	37
Return Values.....	37
Example	37
Remark	37
MTMICRSetConfigFile	38
Parameters	38

Return Values.....	38
Example	38
Remark.....	38
SECTION 4. COMMANDS SENT TO DEVICE.....	39
SECTION 5. KEYS SENT TO DEVICE.....	41
SECTION = Application.....	42
Transfer.....	42
DocUnits.....	42
SECTION = ProcessOptions.....	42
ReadMICR.....	42
Endorse.....	42
RespondEarly	42
DocFeed	43
DocFeedTimeout	43
KVErrStop.....	43
MICRFmtCode	43
SECTION = Endorser.....	43
PrintData.....	43
PrintFrontData	43
PrintFont	43
PrintFrontFont.....	44
PrintStyle	44
PrintFrontStyle	44
PrintRate.....	44
SECTION = ImageOptions.....	45
Number	45
ImageColor#	45
Resolution#.....	45
Compression#.....	45
FileType#.....	45
ImageSide#.....	46
FilterB	46
FilterG	46
JPEGQC	46
JPEGQG	46
CalculateSHA1	46
SECTION = MICROptions.....	47
Threshold	47
Quality.....	47
SECTION 6. KEYS RECEIVED FROM DEVICE	49
SECTION = CommandStatus	51
CheckDS	51
ReturnCode.....	51
ReturnMsg	51
KVErrCnt.....	51
KVErrCode#.....	51
KVErrVal#	51
ResponseType	52
RETURN CODES AND MESSAGES FROM IMAGESAFE	52
SECTION = DocInfo.....	55
DocUnits.....	55
DocWidth	55
DocHeight	55
MICRFont	55
MICRRaw	55
MICRAcct	55
MICRAmt.....	56
MICRAux	56
MICRBankNum.....	56
MICRChkType	56
MICRCountry	56

MICRDecode	56
MICREPC	56
MICROnUs	57
MICROut	57
MICRSerNum	57
MICRTPC	57
MICRTransit	57
MICRParseSts0	58
MICRParseSts1	59
SECTION = ImageInfo	60
ImageSize#	60
ImageURL#	60
ImageSHA1Key#	60
Number	60
SECTION = MSRInfo	61
CardType	61
MPData	61
MPStatus	61
TrackData1	61
TrackData2	61
TrackData3	61
TrackStatus1	61
TrackStatus2	62
TrackStatus3	62
EncryptedTrackData1	62
EncryptedTrackData2	62
EncryptedTrackData3	62
DeviceSerialNumber	62
EncryptedSessionID	62
DUKPTserialnumber	63
SECTION 7. OTHER KEYS AVAILABLE FROM DEVICE	65
SECTION = DeviceCapabilities	66
AutoFeed	66
IDScan	66
MagStripe	66
MagnePrint	66
Endorse	66
Firmware	66
Image	67
MICR	67
UnitSerialNumber	67
Stamp	67
MachineType	67
USBDriver	67
ExpressCapable	67
SECTION = DeviceStatus	68
State	68
Path	68
ScanCalibStatus	68
SnsrCalibStatus	68
ExpressEnabled	68
USBSpeed	69
StartTimeout	69
RawSensors	69
SECTION 8. EXAMPLES OF KEY-VALUE PAIRS	71
EXAMPLE 1: REQUESTING TWO IMAGES WITH ENDORSEMENT AND FRANKING	71
Key-Value Pairs Sent by Host Application to ExCELLA Device	71
Key-Value Pairs Sent by STXDemo Application to ExCELLA Device in XML Format	72
Key-Value Pairs Returning from ExCELLA Device	72
Key-Value Pairs Returning From ExCELLA Device In XML Format	73
EXAMPLE 2: DEVICE STATUS REPORTED BY IMAGESAFE DEVICE	75

EXAMPLE 3: DEVICE CAPABILITIES REPORTED BY EXCELLA DEVICE	75
EXAMPLE 4: DEVICE USAGE REPORTED BY EXCELLA DEVICE	77
APPENDIX A. FORMAT LIST	79
APPENDIX B. ERROR CODES AND MESSAGES	97
APPENDIX C. HOW TO PROCESS CHECKS AND GET IMAGE QUALITY ASSURANCE.....	99

TABLES AND FIGURES

TABLE 2-1. FUNCTIONS	3
FIGURE 2-1. SOFTWARE FLOW FOR CHECK PROCESSING	4
TABLE 6-1. OPERATION COMPLETED.....	52
TABLE 6-2. OPERATION	52
TABLE 6-3. DATA INPUT.....	52
TABLE 6-4. PATH	53
TABLE 6-5. PRINTER	53
TABLE 6-6. MICR	53
TABLE 6-7. SCAN/IMAGE.....	54
TABLE 6-8. MISCELLANEOUS	54
TABLE 6-9. MICRPARSESTS0	58
TABLE 6-10. MICRPARSESTS1	59

SECTION 1. OVERVIEW

The sections of this manual are as follows:

- Section 1. Overview
- Section 2. ImageSafe Software Architecture – includes flow diagrams, screen captures, and several “How To” descriptions.
- Section 3. ImageSafe API – describes ImageSafe device API functions and return codes.
- Section 4. Commands Sent To Device – describes commands sent by the application to the ImageSafe device.
- Section 5. Keys Sent to Device – lists and explains keys sent to the ImageSafe device by the application.
- Section 6. Keys Received From Device – lists and explains keys received from the ImageSafe device.
- Section 7. Other Keys Available from Device – lists additional keys available from ImageSafe device.
- Section 8. Examples of Key-Value Pairs
- Appendix A. Format List – built-in list of MICR data formats from which the user may select one to become the active Format every time a check is read.
- Appendix B. Error codes and messages from ImageSafe API MTXMLMCR.dll.

REQUIREMENTS

The following item is required for software installation:

P/N 22359069, API/Demo for Excella STX (CD)

For the USB interface, this CD installs USB Drivers, MTXMLMCR.dll and Demo program.

SECTION 2. IMAGESAFE SOFTWARE ARCHITECTURE

API FUNCTIONS

Table 2-1 lists functions provided by **MTXXMLMCR.dll**. Please refer to Section 3 for a complete description of these functions.

Table 2-1. Functions

NAME	DESCRIPTION	PAGE
MTMICRGetDevice	Get device name of all devices present.	7
MTMICROpenDevice	Opens device with the given name.	8
MTMICRCloseDevice	Closes device with the given name.	9
MTMICRSetValue	Adds a key/value pair to a given section.	10
MTMICRSetIndexValue	Adds a key/value pair with index to a given section.	11
MTMICRGetValue	Returns value of a key/value pair from a given section.	12
MTMICRGetIndexValue	Returns value of a key/value pair with index from a given section.	14
MTMICRQueryInfo	Sends a request to a given device name to query for info on a given query parameter.	15
MTMICRSendCommand	Sends a single command to a given device name.	17
MTMICRProcessCheck	Sends a scan request to a given device to scan with a given process options.	18
MTMICRGetImage	Sends request to the given device name to get an image of a previously scanned check.	20
MTMICRGetImages	Sends request to the given device name to get one or more images of a previously scanned check.	22
MTMICRGetSectionCount	Returns the number of sections present in a given document information.	24
MTMICRGetSectionName	Returns the section name of the given section number in a given document information.	26
MTMICRGetKeyCount	Returns the number of keys present in a given section in a given document information.	27
MTMICRGetKeyName	Returns the key name of the given key number in a given document information.	30
MTMICRSetTimeout	Sets device communication timeout in milliseconds.	48
MTMICRGetTimeout	Gets device communication timeout in milliseconds.	49
MTMICRLogEnable	Enable the logging.	50
MTMICRSetLogFileHandle	Logs errors to the given file handle.	51
MTMICRSetLogLevel	Sets the level of details for logging	52
MTMICRCOMInitialize	Enable MSXML instantiation at DLL level	53
MTMICRCOMUnInitialize	Disable MSXML instantiation at DLL level	54
MTMICRSetConfigFile	Set the path and file name of the config file. Default is "MICRDEV.INI"	55

SOFTWARE FLOW FOR CHECK PROCESSING

Figure 2-4 illustrates the sequence of check processing.

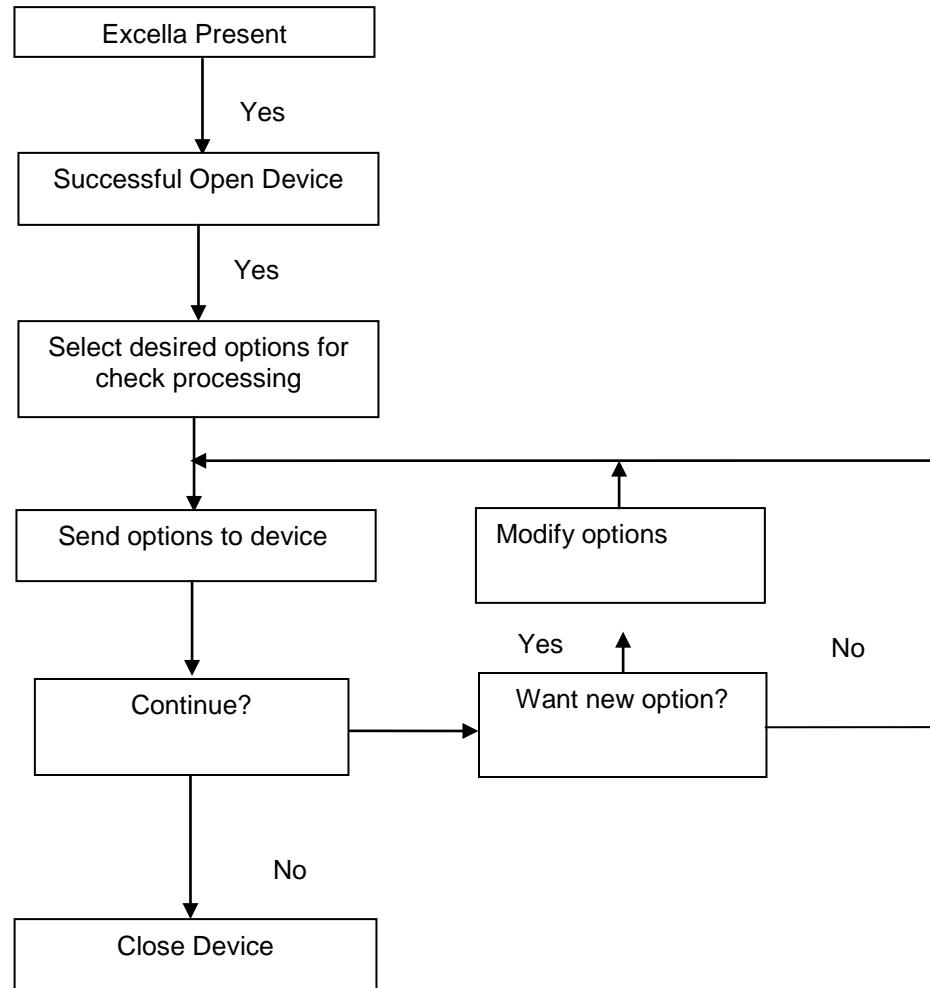


Figure 2-1. Software Flow for Check Processing

HOW TO PROCESS DOCUMENT USING IMAGESAFE API

To process document, follow these steps:

1. Find the attached ImageSafe device by calling function **MTMICRGetDevice**.
2. Use function **MTMICROpenDevice** to open the device.
3. ImageSafe is now ready to accept the XML options using function **MTMICRProcessCheck**. For every document that is processed, a set of options must be sent to the device. These options define how the document will be processed, i.e., image color, image type, image resolution, print back, print front etc. The options are stored as key/value pairs in a buffer. The memory for this buffer must be allocated big enough to store all selected options. These options must be sent to the ImageSafe device using function **MTMICRProcessCheck**. Use function **MTMICRSetValue** and function **MTMICRSetIndexValue** to store the key/value pairs in the option buffer. The options can be set in the buffer only once.
4. Use function **MTMICRProcessCheck** to send the process options to the ImageSafe device.
5. ImageSafe processes the document with the given process options and returns the result of the process operation. The result is stored in the third parameter of the function **MTMICRProcessCheck**. The result contains only the information of the operation and information of the device. It does not contain scanned data. Information such as the size of the scanned images and the image identifier are included. The image information can be found under ImageInfo section. Use function **MTMICRGetValue** and function **MTMICRGetIndexValue** to retrieve key/value pair for image information. If there is no error returned in the document information, use function **MTMICRGetImage** or function **MTMICRGetImages** to get image data.
6. Go to step 4 to process the next check.

HOW TO GET CHECK IMAGES

To get a check image, follow these steps:

1. The function **MTMICRProcessCheck** contains information of the process operation provided by ImageSafe device after it completes document processing. Use this information to find the information of the scanned images in the ImageInfo section. The ImageInfo section contains the size of the image and the image identification for each image.
2. Use function **MTMICRGetValue** or function **MTMICRGetIndexValue** to retrieve the size and the URL of each image. Allocate memory for each image according to its given size.
3. Use function **MTMICRGetImage** to get one image at a time or function **MTMICRGetImages** to get all images at once. The image data is transferred to the buffer that has memory allocated.

PROCESS OPTIONS

Process options are stored as key/value pairs in a buffer. The structure of the options follows XML format. Use function **MTMICRSetValue** or function **MTMICRSetIndexValue** to add an option to this structure. Options are string-based key/value pairs. Each option is stored only once in the buffer. Function **MTMICRGetValue** and function **MTMICRGetIndexValue** can be used to retrieve a key/value pair from this buffer.

ERROR REPORTING

When a document is processed, if there is an error in the ImageSafe device or in the processing operation, the error is returned in the function **MTMICRProcessCheck**. Use function **MTMICRGetValue** or function **MTMICRGetIndexValue** to retrieve the error information. Table 4-13 to table 4-20 list return codes and return messages from ImageSafe.

If an error occurs due to the failure of API function, the error is returned as the return code of the API provided by **MTXXMLMCR.dll**. Appendix B contains a list of errors returning from **MTXXMLMCR.dll**.

DEBUGGING API

On the ImageSafe Demo GUI program, there is an option to enable the error logging function. If this option is enabled, all errors returned from the device are logged into log file named “**STXDemo.log**”. This file resides in the ImageSafe Demo program installation directory.

SECTION 3. IMAGESAFE API

MTMICRGetDevice

MTMICRGetDevice function returns the device name of the device present in the system.

```
ULONG MTMICRGetDevice (
    DWORD      dwDeviceContext,
    char       *pcDevName
);
```

Parameters

dwDeviceContext

This is the device number of the device. This must be set to 1 to get the first device in the system. Increment it by 1 to get the next device name.

pcDevName

Pointer to the buffer where the device name will be stored.

Return Values

MICR_ST_OK
MICR_ST_DEVICE_NOT_FOUND
MICR_ST_BAD_PARAMETER

Remarks

If the function succeeds, the return value is MICR_ST_OK. The device name of the device is filled in the buffer pointed by the parameter pcDevName.

If there is no device present or there is no device that is associated with the given dwDeviceContext, then the function fails and MICR_ST_DEVICE_NOT_FOUND is returned.

If there is no memory allocated for the pcDevName parameter, then MICR_ST_BAD_PARAMETER is returned.

Example

```
#define DEVICE_NAME_LEN 128
int i=1;
DWORD dwResult;
char pcDevName[DEVICE_NAME_LEN] = " ";
while ((dwResult = MTMICRGetDevice(i,(char*) pcDevName)) != MICR_ST_DEVICE_NOT_FOUND)
{
    // Device found, increment the device number
    i++;
}
```

MTMICROpenDevice

MTMICROpenDevice function opens the device with the given device name.

```
ULONG MTMICROpenDevice (
    char      *pcDevName
);
```

Parameters

pcDevName

Pointer to null terminated string that specifies the name of the device to open. Use function **MTMICRGetDevice** to obtain the device name.

Return Values

If the function succeeds, the return value is **MICR_ST_OK**.

```
MICR_ST_OK
MICR_ST_BAD_DEVICE_NAME
MICR_ST_DEVICE_NOT_FOUND
MICR_ST_DEVICE_NOT_RESPONDING
MICR_ST_MSXML_NOT_FOUND
MICR_ST_MSXML_FAILED
```

Remarks

If the pcDevName is NULL, the return value is **MICR_ST_BAD_DEVICE_NAME**.

If no device is found, the return value is **MICR_ST_DEVICE_NOT_FOUND**.

If MSXML is not installed, return value is **MICR_ST_MSXML_NOT_FOUND**

If MSXML cannot be instantiated, return value is **MICR_ST_MSXML_FAILED**

If device is found but cannot connect, return value is **MICR_ST_DEVICE_NOT_RESPONDING**

Example

```
#define DEVICE_NAME_LEN 128
int i=1;
DWORD dwResult;
char pcDevName[DEVICE_NAME_LEN] = "";
while ((dwResult = MTMICRGetDevice(i,(char*) pcDevName)) != MICR_ST_DEVICE_NOT_FOUND)
{
    if (MTMICROpenDevice (pcDevName) == MICR_ST_OK)
    {
        ///close the device
        MTMICRCloseDevice (pcDevName);
    }
    i++;
}
```

MTMICRCloseDevice

MTMICRCloseDevice function closes the device with the given device name.

```
ULONG MTMICRCloseDevice (
    char      *pcDevName
);
```

Parameters

pcDevName

Pointer to null terminated string containing the name of the device to close. This is the device that is previously opened using function **MTMICROpenDevice**.

Return Values

```
MICR_ST_OK
MICR_ST_BAD_DEVICE_NAME
MICR_ST_DEVICE_NOT_FOUND
```

Remarks

If the pcDevName is NULL, the return value is MICR_ST_BAD_DEVICE_NAME.

Example

```
#define DEVICE_NAME_LEN 128
int i=1;
DWORD dwResult;
char pcDevName[DEVICE_NAME_LEN]="" ;

// Get the device name at device number "i"
while ((dwResult = MTMICRGetDevice(i,(char*) pcDevName)) != MICR_ST_DEVICE_NOT_FOUND)
{
    // Success in getting the device name

    // Open this device
    if (MTMICROpenDevice (pcDevName) == MICR_ST_OK)
    {
        // Now close this device
        MTMICRCloseDevice (pcDevName);
    }
    else
    {
        // Error while opening this device.
    }

    i++;
}
```

MTMICRSetValue

MTMICRSetValue function adds a key/value pair to the given device settings specified in pcOptions buffer and in a given section specified in pcSection buffer.

ULONG MTMICRSetValue (

```
    char      *pcOptions,
    char      *pcSection,
    char      *pcKey,
    char      *pcValue,
    DWORD     *pdwLength
);
```

Parameters

pcOptions

 Pointer to null terminated string containing all key/value pairs.

pcSection

 Pointer to null terminated string containing the section name.

pcKey

 Pointer to null terminated string containing the key name.

pcValue

 Pointer to null terminated string containing the key value. If this is NULL, then the key pcKey is deleted from the section pcSection.

pdwLength:

 Pointer to a double word that contains the size of the pcOptions buffer.

Return Values

MICR_ST_OK

MICR_ST_NOT_ENOUGH_MEMORY

MICR_ST_BAD_DATA

MICR_ST_BAD_SECTION_NAME

MICR_ST_BAD_BUFFER_LENGTH

Remarks

The functions return MICR_ST_NOT_ENOUGH_MEMORY, if the pcOptions buffer is not enough to add the new key/value pair. The required size of the buffer is returned in pdwLength.

The minimum size of the buffer should be equal to MTMICR_OPTIONS_BUFFER_SIZE.

The **MTMICRSetValue** function saves the new key/value pair in the pcOptions buffer only. This function does not send this key/value pair to the device. Use function **MTMICRProcessCheck** to send this key/value pair to the device.

If pcKey is NULL, the whole section pcSection will be removed from pcOptions string.

If pcValue is NULL and a key is specified, the specified key will be removed from the specified section

If pdwLength is less than the size of the results pcOptions after new key/value pair is added then

 MICR_ST_NOT_ENOUGH_MEMORY is returned

Example

```

char Settings [4096];
DWORD SettingsBufferSize;

// Initialize Settings

// Initialize the Settings variable first
SettingsBufferSize =4096;

// Set a value of "4" to the key "Number" in section "ImageOptions" and store this new
// key/value pair in the buffer" Settings"
dwStatus=MTMICRSetValue(Settings, "ImageOptions", "Number", "4", &SettingsBufferSize);

```

MTMICRSetIndexValue

MTMICRSetIndexValue is similar to the **MTMICRSetValue**, except that, **MTMICRSetIndexValue** adds the Index number to the pcKey before adding the key/value pair to the given Options buffer.

```

ULONG MTMICRSetIndexValue (
    char      *pcOptions,
    char      *pcSection,
    char      *pcKey,
    unsigned int nIndex,
    char      *pcValue,
    DWORD     *pdwLength
);

```

Parameters

pcOptions
 Pointer to null terminated string containing all key/value pairs.
 pcSection
 Pointer to null terminated string containing the section name.
 pcKey
 Pointer to null terminated string containing the key name.
 nIndex
 Index of the key.
 pcValue
 Pointer to null terminated string containing the key value.
 pdwLength:
 Pointer to a double word that contains the size of the pcOptions buffer.

Return Values

MICR_ST_OK
 MICR_ST_NOT_ENOUGH_MEMORY
 MICR_ST_BAD_PARAMETER
 MICR_ST_BAD_DATA
 MICR_ST_BAD_SECTION_NAME
 MICR_ST_BAD_KEY_NAME
 MICR_ST_BAD_VALUE_BUFFER
 MICR_ST_BAD_BUFFER_LENGTH

Remarks

The function returns MICR_ST_NOT_ENOUGH_MEMORY, if the memory allocated for pcOptions buffer is not big enough to store the additional key/value pair. The required size for the buffer is returned in pdwLength;

The minimum size of the buffer should be equal to MTMICR_OPTIONS_BUFFER_SIZE.

The **MTMICRSetIndexValue** function saves the new key/value pair in the pcOptions buffer only. This function does not send the new key/value pair to the device. Use function **MTMICRProcessCheck** to send this key/value pair to the device.

If parameter **nIndex is less than zero or greater than 4 then MICR_ST_BAD_PARAMETER** is returned.

If pdwLength is less than the length of the results pcOptions string after new key/value pair is added then

MICR_ST_NOT_ENOUGH_MEMORY is returned.

Example

```
char Settings [4096];
DWORD SettingsBufferSize;

// Initialize Settings

// Initialize the Settings variable first
SettingsBufferSize =4096;

// The following command will set ImageColor1 = BW under the ImageOptions section.
dwStatus=MTMICRSetIndexValue(Settings, "ImageOptions","ImageColor",1, "BW",
&SettingsBufferSize);
```

MTMICRGetValue

MTMICRGetValue function retrieves a key/value pair that was previously stored in the pcDocInfo parameter using **MTMICRSetValue** function .

```
ULONG MTMICRGetValue (
char          *pcDocInfo,
char          *pcSection,
char          *pcKey,
char          *pcValue,
DWORD         *pdwLength
);
```

Parameters

pcDocInfo
Buffer pointer containing all the key/value pairs.

pcSection
Pointer to null terminated string containing the section name.

pcKey
Pointer to null terminated string containing the key name.

pcValue
Pointer to the buffer that receives the retrieved string.

pdwLength
Specifies the size of the pcValue buffer.

Return Values

MICR_ST_OK
 MICR_ST_NOT_ENOUGH_MEMORY
 MICR_ST_ERR_LOAD_XML
 MICR_ST_ERR_GET_DOM_POINTER
 MICR_ST_BAD_DATA
 MICR_ST_BAD_SECTION_NAME
 MICR_ST_BAD_KEY_NAME
 MICR_ST_BAD_VALUE_BUFFER
 MICR_ST_BAD_BUFFER_LENGTH
 MICR_ST_KEY_NOT_FOUND

Remarks

MTMICRGetValue finds the key in the pcDocInfo buffer then returns its value in the pcValue.

If **MTMICRGetValue** succeeds it returns MICR_ST_OK.

If pdwLength is less than the size of the returned value then MICR_ST_NOT_ENOUGH_MEMORY is returned and the required size for the pcValue buffer is returned in the pdwLength.

If the key/value pair can not be found, then a NULL is returned for pcValue and error parameter MICR_ST_KEY_NOT_FOUND is returned.

Example

```
char Settings [4096];
char DocInfo [4096];
char device[4096] ="";
DWORD SettingsBufferSize;
DWORD DocInfoSize;
char cValue [1024];
DWORD valueSize;
DWORD dwStatus;

// Initialize Settings

DocInfoSize = 4096;

// Use function MTMICRGetDevice to get device name for variable "device"
// Call MTMICRProcessCheck function to process a document.
dwStatus = MTMICRProcessCheck (device, Settings, DocInfo, &DocInfoSize);

if (dwStatus == MTMICR_ST_OK)
{
    //Let us check the return status from the device
    valueSize = 1024;
    dwStatus=MTMICRGetValue(DocInfo, "CommandStatus", "ReturnCode", cValue,
    &valueSize);
    if (dwStatus != MICR_ST_OK)
        // error retrieving key value
    else
    {
        // do further process
    }
}
```

MTMICRGetIndexValue

MTMICRGetIndexValue function retrieves a key/value pair that was previously stored in the pcDocInfo parameter. **MTMICRGetIndexValue** function is similar to the function **MTMICRGetValue**. **MTMICRGetIndexValue** function adds index to the key name before searching for the value of the key name pcKey in the pcDocInfo.

```
ULONG MTMICRGetIndexValue (
    char      *pcDocInfo,
    char      * pcSection,
    char      *pcKey,
    unsigned int nIndex,
    char      *pcValue,
    DWORD      *pdwLength
);
```

Parameters

pcDocInfo
 Buffer pointer containing all the key/value pairs.

pcSection
 Pointer to null terminated string containing the section name.

pcKey
 Pointer to null terminated string containing the key name.

nIndex
 Key Index Number

pcValue
 Pointer to the buffer that receives the retrieved value.

pdwLength
 Specifies the size of the buffer pointed to by the pcValue parameter.

Return Values

MICR_ST_OK
MICR_ST_NOT_ENOUGH_MEMORY
MICR_ST_ERR_LOAD_XML
MICR_ST_ERR_GET_DOM_POINTER
MICR_ST_BAD_DATA
MICR_ST_BAD_SECTION_NAME
MICR_ST_BAD_KEY_NAME
MICR_ST_BAD_VALUE_BUFFER
MICR_ST_BAD_BUFFER_LENGTH
MICR_ST_KEY_NOT_FOUND

Example

```

char Settings [4096];
char DocInfo [4096];
char device[4096] ="";
DWORD SettingsBufferSize;
DWORD DocInfoSize;
char cValue [1024];
DWORD valueSize;
DWORD dwStatus;

// Initialize Settings

DocInfoSize = 4096;

// Use function MTMICRGetDevice to get device name for variable "device"
// Call MTMICRProcessCheck function to process a document.
dwStatus = MTMICRProcessCheck (device, Settings, &DocInfoSize);

if (dwStatus == MTMICR_ST_OK)
{
    //Let us check the return status from the device
    valueSize = 1024;
    dwStatus=MTMICRGetValue(DocInfo, "CommandStatus", "ReturnCode", cValue,
    &valueSize);
    if (dwStatus != MICR_ST_OK)
        // error retrieving key value
    else
    {
        // Get the key ImageSize1 under ImageInfo section
        dwStatus=MTMICRGetIndexValue(DocInfo, "ImageInfo", "ImageSize",1, cValue,
                                     &valueSize);
        if (dwStatus == MICR_ST_OK)
        {
        }
    }
}

```

MTMICRQueryInfo

MTMICRQueryInfo function inquires data of a given section name from the given device name.

```

ULONG MTMICRQueryInfo (
    char      *pcDevName,
    char      *pcSection,
    char      *pcSectionData,
    DWORD     *pdwLength
);

```

Parameters

pcDevName

 Pointer to null terminated string containing device name.

pcSection

 Pointer to null terminated string containing the section name. e.g. DeviceCapabilities, DeviceUsage, DeviceStatus, etc.

pcSectionData

 Pointer to the buffer that is used to store the data of the inquiry section.

pdwLength

 Specifies the size of the pcSectionData buffer.

Return Values

MICR_ST_OK

MICR_ST_DEVICE_NOT_OPEN

MICR_ST_DEVICE_NOT_RESPONDING

MICR_ST_DEVICE_CONNECTION_ERROR

MICR_ST_REQUEST_TIMEDOUT

MICR_ST_CONNECT_REQUEST_TIMEDOUT

MICR_ST_ERR_INTERNET_CONNECT

MICR_ST_ERR_HTTP_OPEN_REQUEST

MICR_ST_ERR_HTTP_SEND_REQUEST

MICR_ST_NOT_ENOUGH_MEMORY

MICR_ST_BAD_DEVICE_NAME

MICR_ST_BAD_QUERY_PARM

MICR_ST_BAD_BUFFER

MICR_ST_BAD_BUFFER_LENGTH

MICR_ST_USB_GET_DATA_FAILED

MICR_ST_INET_GET_DATA_FAILED

Remarks

If the function succeeds MICR_ST_OK is returned.

If the device fails to respond, MICR_ST_DEVICE_NOT_RESPONDING is returned.

If the memory allocated for pcSectionData buffer that is not big enough to store the data of the inquiry section,
MICR_ST_NOT_ENOUGH_MEMORY is returned.

Error results from bad connection with device can be one of the following:

 MICR_ST_CONNECT_REQUEST_TIMEDOUT

 MICR_ST_REQUEST_TIMEDOUT

 MICR_ST_DEVICE_NOT_RESPONDING

 MICR_ST_ERR_INTERNET_CONNECT

 MICR_ST_ERR_HTTP_OPEN_REQUEST

 MICR_ST_ERR_HTTP_SEND_REQUEST

 MICR_ST_USB_GET_DATA_FAILED

 MICR_ST_INET_GET_DATA_FAILED

Example

```
#define BUFFER_LEN 4096
char pResult [BUFFER_LEN];
DWORD resultLength;
resultLength = BUFFER_LEN;
MTMICRQueryInfo(pcDeviceName, "DeviceCapabilities", pResult, &resultLength);
```

MTMICRSendCommand

MTMICRSendCommand function is used to send a single command to the device.

```
ULONG MTMICRSendCommand (
```

```
    char      *pcDevName,
    char      *pcCommand,
    char      *pcResult,
    DWORD     *pdwLength
```

```
);
```

Parameters

pcDevName

Pointer to null terminated string containing device name.

pcCommand

Pointer to null terminated string containing the command string. There are two commands available: command “ClearPathExit” and command “ClearPathEntry.”

pcResult

Pointer to the buffer that is used to store results returning from device.

pdwLength

Specifies the size of the pcResult buffer.

Return Values

```
MICR_ST_OK
MICR_ST_DEVICE_NOT_OPEN
MICR_ST_DEVICE_NOT_RESPONDING
MICR_ST_DEVICE_CONNECTION_ERROR
MICR_ST_REQUEST_TIMEDOUT
MICR_ST_CONNECT_REQUEST_TIMEDOUT
MICR_ST_ERR_INTERNET_CONNECT
MICR_ST_ERR_HTTP_OPEN_REQUEST
MICR_ST_ERR_HTTP_SEND_REQUEST
MICR_ST_NOT_ENOUGH_MEMORY
MICR_ST_ERR_CREATE_EVENT
MICR_ST_BAD_DEVICE_NAME
MICR_ST_BAD_PARAMETER
MICR_ST_INSUFFICIENT_DISKSPACE
MICR_ST_USB_GET_DATA_FAILED
MICR_ST_INET_GET_DATA_FAILED
MICR_ST_HTTP_HEADER_NOT_FOUND
```

Remarks

When sending command “ClearPathExit” or command “ClearPathEntry” to the device, the device is trying to clear the document path. If there is document in the path, the document is removed through the exit point if the command is “ClearPathExit” or the document is removed through the entry point if the command is “ClearPathEntry.”

Example

```
char szResult [4096];
char szDeviceName[4096];
char Buffer[256];
DWORD dwBufferLength ;
DWORD dwStatus;

szDeviceName = "Excella"; // assuming this device has been opened

dwBufferLength = 4096;

if (MTMICRSendCommand(szDeviceName, "ClearPathEntry", szResult , & dwBufferLength)==
MICR_ST_OK)
{
    dwBufferLength = 256;
    dwStatus = MTMICRGetValue(szResult, SECTION_COMMAND_STATUS,"ReturnCode",
Buffer,
                                         & dwBufferLength);
    if (dwStatus == MICR_ST_OK)
    {
        dwStatus = atol (Buffer);

        if (dwStatus == 0)
            printf ("Clear path done!");
        else
            .printf ("Clear path failed!");

    }
}
```

MTMICRProcessCheck

MTMICRProcessCheck function sends a scan check request with the given process options to the given device name. When the device completes the scan request, the result of the scan is returned in the buffer pcDocInfo.

```
ULONG MTMICRProcessCheck (
    char      *pcDevName,
    char      *pcProcessOptions,
    char      *pcDocInfo,
    DWORD     *pdwDocInfoSize
);
```

Parameters

pcDevName

Pointer to null terminated string containing device name.

pcProcessOptions

Pointer to a buffer containing the options to be used in processing the check. The options are stored in the buffer by using function **MTMICRSetValue** or function **MTMICRSetIndexValue**.

pcDocInfo

Pointer to the buffer containing the information returned from the device. The returned information contains command status, MICR data, and image information.

pdwDocInfoSize

Size of the buffer pcDocInfo.

Return Values

MICR_ST_OK
 MICR_ST_NOT_ENOUGH_MEMORY
 MICR_ST_PROCESS_CHECK_FAILED
 MICR_ST_BAD_DATA
 MICR_ST_BAD_BUFFER
 MICR_ST_BAD_BUFFER_LENGTH
 MICR_ST_BAD_DEVICE_NAME
 MICR_ST_DEVICE_NOT_OPEN
 MICR_ST_DEVICE_NOT_RESPONDING
 MICR_ST_REQUEST_TIMEDOUT
 MICR_ST_CONNECT_REQUEST_TIMEDOUT
 MICR_ST_ERR_INTERNET_CONNECT
 MICR_ST_ERR_HTTP_OPEN_REQUEST
 MICR_ST_ERR_HTTP_SEND_REQUEST
 MICR_ST_INET_GET_DATA_FAILED
 MICR_ST_USB_GET_DATA_FAILED
 MICR_ST_HTTP_HEADER_NOT_FOUND

Remarks

If the function succeeds MICR_ST_OK is returned.

If there is no data returns from device, error MICR_ST_PROCESS_CHECK_FAILED is returned

If pcProcessOptions is NULL, error MICR_ST_BAD_DATA is returned

If pcDocInfo is NULL, error MICR_ST_BAD_BUFFER is returned

If the size of returned data is larger than the value specified in pdwDocInfoSize, error

 MICR_ST_NOT_ENOUGH_MEMORY is returned

If the function fails to get HTTP header information, MICR_ST_HTTP_HEADER_NOT_FOUND is returned.

Error results from bad connection with device can be one of the following:

 MICR_ST_CONNECT_REQUEST_TIMEDOUT
 MICR_ST_REQUEST_TIMEDOUT
 MICR_ST_DEVICE_NOT_RESPONDING
 MICR_ST_ERR_INTERNET_CONNECT
 MICR_ST_ERR_HTTP_OPEN_REQUEST
 MICR_ST_ERR_HTTP_SEND_REQUEST
 MICR_ST_USB_GET_DATA_FAILED
 MICR_ST_INET_GET_DATA_FAILED

Example

```
#define BUFFER_LEN 4096

char docInfo [BUFFER_LEN];
char options [BUFFER_LEN];
char Device[4096] = "";
DWORD docInfoSize;

// Set up options using function MTMICRSetValue or function MTMICRSetIndexValue
// Use function MTMICRGetDevice to get device name for variable "Device"

docInfoSize = BUFFER_LEN;
dwStatus=MTMICRProcessCheck(Device, options, docInfo, &docInfoSize);

// Use MTMICRGetValue and MTMICRGetIndexValue to parse the docInfo.
```

MTMICRGetImage

MTMICRGetImage function sends to the given device name a request for image data results from a previously scan.

```
ULONG MTMICRGetImage (
    char      *pcDevName,
    char      *pcImageID,
    char      *pcBuffer,
    DWORD     *pdwLength
);
```

Parameters

pcDevName

 Pointer to null terminated string containing device name.

pcImageID

 the identification of the requested image

pcBuffer

 Pointer to buffer for storing the image data.

pdwLength

 Specifies the size of the pcBuffer.

Return Values

MICR_ST_OK
MICR_ST_DEVICE_NOT_RESPONDING
MICR_ST_IMAGE_NOT_FOUND
MICR_ST_NOT_ENOUGH_MEMORY
MICR_ST_UNKOWN_ERROR
MICR_ST_BAD_BUFFER
MICR_ST_BAD_IMAGE_NAME
MICR_ST_BAD_DEVICE_NAME
MICR_ST_BAD_BUFFER_LENGTH
MICR_ST_DEVICE_NOT_OPEN
MICR_ST_CONNECT_REQUEST_TIMEDOUT
MICR_ST_REQUEST_TIMEDOUT
MICR_ST_DEVICE_NOT_RESPONDING
MICR_ST_ERR_INTERNET_CONNECT
MICR_ST_ERR_HTTP_OPEN_REQUEST
MICR_ST_ERR_HTTP_SEND_REQUEST
MICR_ST_USB_GET_DATA_FAILED
MICR_ST_INET_GET_DATA_FAILED

Remarks

If the function succeeds, MICR_ST_OK is returned.

If the requested image is not found, MICR_ST_IMAGE_NOT_FOUND is returned.

If the device fails to respond to the command, the return value is MICR_ST_DEVICE_NOT_RESPONDING.

If the size of the buffer uses to store the image is not large enough, MICR_ST_NOT_ENOUGH_MEMORY is returned.

Error results from bad connection with device can be one of the following:

- MICR_ST_CONNECT_REQUEST_TIMEDOUT
- MICR_ST_REQUEST_TIMEDOUT
- MICR_ST_DEVICE_NOT_RESPONDING
- MICR_ST_ERR_INTERNET_CONNECT
- MICR_ST_ERR_HTTP_OPEN_REQUEST
- MICR_ST_ERR_HTTP_SEND_REQUEST
- MICR_ST_USB_GET_DATA_FAILED
- MICR_ST_INET_GET_DATA_FAILED

Example

```
#define BUFFER_LEN 512
// DocInfo is returned by the MTMICRProcessCheck()

void GetNthImages (char *Device, unsigned int nIndex, char *DocInfo)
{
    char key [512];
    DWORD bufferSize;
    char cValue[BUFFER_LEN] = " ";
    DWORD nValueSize;

    // Get the image size from DocInfo
    nValueSize = BUFFER_LEN;
    MTMICRGetIndexValue (DocInfo, "ImageInfo", "ImageSize", nIndex, cValue, &nValueSize);

    // Convert size to integer
    bufferSize = atol (cValue);

    // Get the Image Id from DocInfo
    nValueSize = BUFFER_LEN;
    MTMICRGetIndexValue (DocInfo, "ImageInfo", "ImageSize", nIndex, cValue, &nValueSize);
    if (bufferSize)
    {
        // Allocate memory for image
        ImageBuffer = (char *) VirtualAlloc (NULL, bufferSize, MEM_COMMIT,
                                            PAGE_READWRITE);

        // Use function MTMICRGetDevice to get device name for variable "Device"
        // Get the image from the device
        MTMICRGetImage (Device, cValue, ImageBuffer, &bufferSize);
        .
        .
        // Free the memory
        VirtualFree (ImageBuffer, bufferSize, MEM_DECOMMIT);
    }
}
```

MTMICRGetImages

MTMICRGetImages is similar to **MTMICRGetImage** except **MTMICRGetImages** can get multiple images in one function call.

```
ULONG MTMICRGetImages (
    char          *pcDevName,
    GET_IMAGE    *pGetImage,
    DWORD        dwTotalImages
);
```

Parameters

pcDevName

Pointer to null terminated string containing device name.

pGetImage

Pointer to a list of GET_IMAGE structures containing the image information.

```
typedef struct _GET_IMAGE
{
    char *pcImageId;
    char *pcBuffer;
    DWORD dwBufferLength;
    DWORD dwBytesReturned;
    DWORD dwStatus;
} GET_IMAGE;
```

pcImageId = ImageURLx returned by the **MTMICRProcessCheck** in the document information. Where x is the image index.

pcBuffer = Allocate memory required to store the image. The image size is also returned in the document information from the **MTMICRProcessCheck**.

dwBufferLength = Size of pcBuffer in bytes.

dwBytesReturned = **MTMICRGetImages** will store the number of bytes returned by the device.

dwStatus = **MTMICRGetImages** fills the status of each image.

dwTotalImages=Number of Images requested.

Return Values

MICR_ST_OK
 MICR_ST_DEVICE_NOT_RESPONDING
 MICR_ST_IMAGE_NOT_FOUND
 MICR_ST_NOT_ENOUGH_MEMORY
 MICR_ST_ERR_INTERNET_CONNECT
 MICR_ST_ERR_HTTP_OPEN_REQUEST
 MICR_ST_ERR_HTTP_SEND_REQUEST
 MICR_ST_DEVICE_CONNECTION_ERROR
 MICR_ST_BAD_PARAMETER
 MICR_ST_BAD_DEVICE_NAME
 MICR_ST_BAD_BUFFER
 MICR_ST_DEVICE_NOT_OPEN
 MICR_ST_BAD_BUFFER_SIZE
 MICR_ST_BAD_IMAGE_NAME
 MICR_ST_CONNECT_REQUEST_TIMEDOUT
 MICR_ST_REQUEST_TIMEDOUT
 MICR_ST_INSUFFICIENT_DISKSPACE
 MICR_ST_QUERY_CONTENT_ERROR
 MICR_ST_USB_GET_DATA_FAILED
 MICR_ST_INET_GET_DATA_FAILED
 MICR_ST_HTTP_HEADER_NOT_FOUND

Remarks

If the function succeeds, MICR_ST_OK is returned.

If the requested image is not found, MICR_ST_IMAGE_NOT_FOUND is returned.

If the function fails to get data packet information, MICR_ST_QUERY_CONTENT_ERROR is returned.

If the function fails to get HTTP header information, MICR_ST_HTTP_HEADER_NOT_FOUND is returned.

If the device fails to respond to the command, the return value is MICR_ST_DEVICE_NOT_RESPONDING.

If the size of the buffer uses to store the image data is not large enough, MICR_ST_NOT_ENOUGH_MEMORY is returned.

Error results from bad connection with device can be one of the following:

MICR_ST_CONNECT_REQUEST_TIMEDOUT
 MICR_ST_REQUEST_TIMEDOUT
 MICR_ST_DEVICE_NOT_RESPONDING
 MICR_ST_ERR_INTERNET_CONNECT
 MICR_ST_ERR_HTTP_OPEN_REQUEST
 MICR_ST_ERR_HTTP_SEND_REQUEST
 MICR_ST_USB_GET_DATA_FAILED
 MICR_ST_INET_GET_DATA_FAILED

Example

```
#define BUFFER_LEN 512

// DocInfo is returned by the MTMICRProcessCheck()
#define BUFFER_LEN 4096

GET_IMAGE getImages [4];
DWORD dwSize = BUFFER_LEN;
char szData [BUFFER_LEN];
DWORD dwStatus;

for (int i = 1; i < 5; i++) {
    // Get the image size for image number i

    dwStatus = MTMICRGetIndexValue (DocInfo, "Image Info", "Image Size", i, szData,
& dwSize);

    if (dwStatus == MICR_ST_OK) {
        // Convert the size to integer
        dwSize = atol (szData);
        if (dwSize <= 0)
            continue;

        dwSize = BUFFER_LEN;

        // Get the image id
        dwStatus = MTMICRGetIndexValue (DocInfo, "Image Info", "Image URL", i,
szData, & dwSize);
        if (dwStatus == MICR_ST_OK) {

            char *p = (char *) malloc (strlen (szData)+1);
            getImages [i-1].pcImageId = p;
            strcpy (getImage [i-1]. pcImageId, szData);
            getImages [i-1].dwBufferLength = bufferSize;
            getImages [i-1].pcBuffer =
                (char *) VirtualAlloc (NULL, getImages [i-1].dwBufferLength,
MEM_COMMIT,
                                    PAGE_READWRITE);
        }
    }
}

// Use function MTMICRGetDevice to get device name for variable "Device"
error = MTMICRGetImages (Device, getImages, 4);
```

MTMICRGETSECTIONCOUNT

MTMICRGetSectionCount function returns the number of section present in a null terminated buffer which contains a set of key/value pairs. The key/value pairs get stored in the buffer using function **MTMICRSetValue** or **MTMICRSetIndexValue**.

```
ULONG MTMICRGetSectionCount (
    char          *pcData,
    DWORD         *pdwSectionCount
);
```

Parameters

pcData

Pointer to null terminated string containing a set of key/value pairs.

pdwSectionCount

When the function returns, this variable contains the number of sections present in the pcData.

Return Values

MICR_ST_OK
 MICR_ST_BAD_PARAMETER
 MICR_ST_ERR_GET_DOM_POINTER
 MICR_ST_ERR_LOAD_XML
 MICR_ST_SECTION_NOT_FOUND
 MICR_ST_BAD_DATA
 MICR_ST_BAD_BUFFER_LENGTH

Remarks

If the function succeeds MICR_ST_OK is returned.

If pcData is NULL, MICR_ST_BAD_DATA is returned.

If data in pcData string is not in XML format, MICR_ST_ERR_LOAD_XML is returned.

If there is problem using MSXML, MICR_ST_ERR_GET_DOM_POINTER is returned.

Example

```
char Settings [4096];
char DocInfo [4096];
char device[4096] = "";
DWORD SettingsBufferSize;
DWORD DocInfoSize;
char cValue [1024];
DWORD valueSize;
DWORD dwStatus;

// Initialize Settings

DocInfoSize = 4096;

// Use function MTMICRGetDevice to get device name for variable "device"
// Call MTMICRProcessCheck function to process a document.
dwStatus = MTMICRProcessCheck (device, Settings, DocInfo, &DocInfoSize);

if (dwStatus == MICR_ST_OK)
{
    // Let us scan through all the key pair values returned in the DocInfo
    // DWORD sectionCount;

    // Get total number of sections
    if (MTMICRGetSectionCount (DocInfo, &sectionCount) ==MICR_ST_OK)
    {
    }

}
```

MTMICRGetSectionName

MTMICRGetSectionName function returns the name of the section which has the section number given in variable dwSectionNumber. **MTMICRGetSectionName** parses through the buffer pcData containing a set of key/value pairs which was previously stored in the buffer by using function **MTMICRSetValue** or function **MTMICRSetIndexValue**.

```
ULONG MTMICRGetSectionName (
    char      *pcData,
    DWORD     dwSectionNumber,
    char      *pcSectionName,
    DWORD     *pdwSectionNameSize
);
```

Parameters

pcData

Pointer to null terminated string containing a set of key/value pairs..

dwSectionNumber

The section number of the section requesting for name.

pcSectionName

Pointer to a buffer uses to store the section name.

pdwSectionNameSize

Pointer to a variable that specifies the size, in bytes, of the buffer pointed to by the *pcSectionName* parameter. When the function returns, this variable contains the size of the data copied to *pcSectionName*. If the buffer specified by *pcSectionName* parameter is not large enough to hold the data, the function returns the value **MICR_ST_NOT_ENOUGH_MEMORY**, and stores the required buffer size, in bytes, into the variable pointed to by *pdwSectionNameSize*.

Return Values

MICR_ST_OK
MICR_ST_ERR_GET_DOM_POINTER
MICR_ST_ERR_LOAD_XML
MICR_ST_SECTION_NOT_FOUND
MICR_ST_BAD_DATA
MICR_ST_BAD_BUFFER_LENGTH
MICR_ST_BAD_SECTION_NAME
MICR_ST_NOT_ENOUGH_MEMORY

Remarks

If the function succeeds **MICR_ST_OK** is returned.

If *pdwSectionNameSize* is NULL, error **MICR_ST_BAD_BUFFER_LENGTH** is returned.

If the value of *pdwSectionNameSize* is not big enough to hold the name of requested section,

MICR_ST_NOT_ENOUGH_MEMORY is returned.

If *pcData* is NULL, **MICR_ST_BAD_DATA** is returned.

If data in *pcData* string is not in XML format, **MICR_ST_ERR_LOAD_XML** is returned.

If there is problem using MSXML, **MICR_ST_ERR_GET_DOM_POINTER** is returned.

Example

```

char Settings [4096];
char DocInfo [4096];
char device[4096] = "";
DWORD SettingsBufferSize;
DWORD DocInfoSize;
char cValue [1024];
DWORD valueSize;
DWORD dwStatus;

// Initialize Settings

DocInfoSize = 4096;

// Use function MTMICRGetDevice to get device name for variable "device"
// Call MTMICRProcessCheck function to process a document.
dwStatus = MTMICRProcessCheck (device, Settings, &DocInfoSize);

if (dwStatus == MICR_ST_OK)
{
    // Let us scan through all the key pair values returned in the DocInfo
    DWORD sectionCount;
    DWORD sectionIndex;
    // Get total number of sections
    if (MTMICRGetSectionCount (DocInfo, &sectionCount) ==MICR_ST_OK) {

        for (sectionIndex = 0; sectionIndex < sectionCount; sectionIndex) {
            char SectionName [128];
            DWORD SectionNameSize = 128;
            dwStatus = MTMICRGetSectionName(DocInfo, sectionIndex, SectionName,
&SectionNameSize);
            if (dwStatus == MICR_ST_OK)
            {
                }
            }
        }
    }
}

```

MTMICRGetKeyCount

MTMICRGetKeyCount function returns the number of keys that belong to a section with the name specified in variable pcSection. The function **MTMICRGetKeyCount** parses through a null terminated string which contains a set of key/value pairs. The key/value pairs get stored in the buffer using function **MTMICRSetValue** or **MTMICRSetIndexValue**.

```

ULONG MTMICRGetKeyCount (
    char      *pData,
    char      *pcSection,
    DWORD     *pdwKeyCount
);

```

Parameters

pcData

 Pointer to null terminated string containing a set of key/value pairs.

pcSection

 Pointer to null terminated string containing the section name.

pdwKeyCount

 When the function returns, this variable contains the number of keys under the section name pcSection present in the pcData.

Return Values

MICR_ST_OK

MICR_ST_ERR_GET_DOM_POINTER

MICR_ST_ERR_LOAD_XML

MICR_ST_SECTION_NOT_FOUND

MICR_ST_BAD_DATA

MICR_ST_BAD_SECTION_NAME

MICR_ST_BAD_KEY_NAME

Remarks

If the function succeeds MICR_ST_OK is returned.

If pcData is NULL, MICR_ST_BAD_DATA is returned.

If data in pcData string is not in XML format, MICR_ST_ERR_LOAD_XML is returned.

If there is problem using MSXML, MICR_ST_ERR_GET_DOM_POINTER is returned

Example

```

char Settings [4096];
char DocInfo [4096];
char device[4096] = "";
DWORD SettingsBufferSize;
DWORD DocInfoSize;
char cValue [1024];
DWORD valueSize;
DWORD dwStatus;

// Initialize Settings

DocInfoSize = 4096;

// Use function MTMICRGetDevice to get device name for variable "device"
// Call MTMICRProcessCheck function to process a document.
dwStatus = MTMICRProcessCheck (device, Settings, &DocInfoSize);

if (dwStatus == MICR_ST_OK){
    // Let us scan through all the key pair values returned in the DocInfo
    DWORD sectionCount;
    DWORD sectionIndex;

    // Get total number of sections
    if (MTMICRGetSectionCount (DocInfo, &sectionCount) ==MICR_ST_OK)      {
        for (sectionIndex = 0; sectionIndex < sectionCount; sectionIndex)  {
            char SectionName [128];
            DWORD SectionNameSize = 128;
            dwStatus = MTMICRGetSectionName(DocInfo, sectionIndex, SectionName,
                &SectionNameSize);
            if (dwStatus == MICR_ST_OK)          {
                // Display the section Name
                DWORD keyCount;
                if (MTMICRGetKeyCount (DocInfo, SectionName, &keyCount) == MICR_ST_OK){
                    // Display the key count
                }
            }
        }
    }
}

```

MTMICRGetKeyName

MTMICRGetKeyName function returns the name of the key which has the key index number given in variable dwKeyNumber and belongs to the section group with the section name specified in variable pcSection. **MTMICRGetKeyName** parses through the buffer pcSettings containing a set of key/value pairs which was previously stored in the buffer by using function **MTMICRSetValue** or function **MTMICRSetIndexValue**.

```
ULONG MTMICRGetKeyName (
    char      *pcSettings,
    char      *pcSection,
    DWORD     dwKeyNumber,
    char      *pcKey,
    DWORD     *pdwKeySize
);
```

Parameters

pcSettings

Pointer to null terminated string containing a set of key/value pairs.

pcSection

Pointer to null terminated string containing the section name.

dwKeyNumber

Specifies the key index number of the requested key.

pcKey

When the function returns, this variable contains key name of the key at index dwKeyNumber.

pdwKeySize

Pointer to a variable that specifies the size, in bytes, of the buffer pcKey. If the size of the buffer uses to store the name of the requested key, the required size is stored in this variable when the function completes execution.

Return Values

MICR_ST_OK
MICR_ST_ERR_GET_DOM_POINTER
MICR_ST_ERR_LOAD_XML
MICR_ST_SECTION_NOT_FOUND
MICR_ST_KEY_NUMBER_NOT_FOUND
MICR_ST_NOT_ENOUGH_MEMORY
MICR_ST_BAD_BUFFER_LENGTH
MICR_ST_BAD_DATA
MICR_ST_BAD_SECTION_NAME
MICR_ST_BAD_BUFFER

Remarks

If the function succeeds MICR_ST_OK is returned

If pcSettings is NULL, MICR_ST_BAD_DATA is returned.

If data in pcSettings string is not in XML format, MICR_ST_ERR_LOAD_XML is returned.

If there is problem using MSXML, MICR_ST_ERR_GET_DOM_POINTER is returned

If pdwKeySize is NULL, error MICR_ST_BAD_BUFFER_LENGTH is returned.

If the value of pdwSectionNameSize is not big enough to hold the name of requested section,

MICR ST NOT ENOUGH MEMORY is returned

Example

```

char Settings [4096];
char DocInfo [4096];
char device[4096] = "";
DWORD SettingsBufferSize, DocInfoSize, valueSize, dwStatus , dwCount, nIndex ;
char cValue [1024];
DocInfoSize = 4096;
char szSectionName [128];
DWORD dwSize = 128;
// Use function MTMICRGetDevice to get device name for variable "device"
// Call MTMICRProcessCheck function to process a document.
If ( MTMICRProcessCheck (device, Settings, DocInfo, &DocInfoSize) == MICR_ST_OK) {
    // Let us scan through all the key pair values returned in the DocInfo
    // Get total number of sections
    if (MTMICRGetSectionCount (DocInfo, &dwSectionCnt) ==MICR_ST_OK) {
        for (nIndex = 0; nIndex < dwSectionCnt; nIndex++){
            If (MTMICRGetSectionName(DocInfo, nIndex, szSectionName, &dwSize == MICR_ST_OK) {
                // Get number of total keys which belong to section
                DWORD keyCount;
                if (MTMICRGetKeyCount (DocInfo, szSectionName, &keyCount) == MICR_ST_OK){
                    // Get name of each key
                    for (int keyIndex = 0; keyIndex < keyCount; keyIndex++)
                        char szKeyName [128];
                        dwStatus = MTMICRGetKeyName(DocInfo, szSectionName, keyIndex,
szKeyName, & dwSize);
                        if (dwStatus == MICR_ST_OK) {
                            // We now have the section and key, let get the value
                            char szValue [1024];
                            dwStatus = MTMICRGetValue(DocInfo, szSectionName, szKeyName,
szValue, & dwSize);
                            if (dwStatus == MICR_ST_OK)
                            {
                            }
                            }
                        }
                    }
                }
            }
        }
    }
}

```

MTMICRSetTimeout

MTMICRSetTimeout function sets a duration for timeout in case there is a communication problem with the ImageSafe device. **MTMICRProcessCheck**, **MTMICRGetImage**, **MTMICRGetImages**, and **MTMICRQueryInfo** functions use this timeout value to wait for the device to respond. This timeout should be greater than the total time required to wait for a check feed, check movement along the path, and image processing. A recommended time is 30 seconds.

Note

*This time must always be longer than DocFeedTimeout
when used (see ProcessOptions in Section 5)*

```
ULONG MTMICRSetTimeout (
    DWORD          dwMilliSeconds
);
```

Parameters

dwMilliSeconds

Duration for timeout. The timeout is in milliseconds unit.

Return Values

No return value for this function.

Example

```
#define DEVICE_NAME_LEN 128
int i=1;
DWORD dwResult;
char cDeviceName[DEVICE_NAME_LEN] = " ";

while ((dwResult = MTMICRGetDevice(i,(char*) cDeviceName)) != MICR_ST_DEVICE_NOT_FOUND)
{
    if (MTMICROpenDevice (cDevicesNames) == MICR_ST_OK)
    {
        // Set timeout
        MTMICRSetTimeout (15000); // 15 seconds
        //close the device
    }
    i++;
}
```

MTMICRGetTimeout

MTMICRGetTimeout function returns the set timeout in milliseconds. **MTMICRProcessCheck**, **MTMICRGetImage**, **MTMICRGetImages**, and **MTMICRQueryInfo** functions use this timeout value to wait for device to respond. By default the timeout is 5 seconds.

```
ULONG MTMICRGetTimeout (
    DWORD          *pdwMilliSeconds
);
```

Parameters

pdwMilliSeconds

Pointer to a DWORD. When the function completes, this variable contains the timeout in milliseconds

Return Values

No return value for this function.

Example

```
#define DEVICE_NAME_LEN 128
int i=1;
DWORD dwResult;
char cDeviceName[DEVICE_NAME_LEN] = " ";
while ((dwResult = MTMICRGetDevice(i,(char*) cDeviceName)) != MICR_ST_DEVICE_NOT_FOUND)
{
    if (MTMICROpenDevice (cDevicesNames) == MICR_ST_OK)
    {
        //Get timeout
        DWORD timeout;
        MTMICRGetTimeout (&timeout);
        ///close the device
    }
    i++;
}
```

MTMICRLogEnable

MTMICRLogEnable enable or disable the logging. If there is a desire to get a log file of all messages and errors, a valid log file handle must be set with function **MTMICRSetLogFileHandle** and also a TRUE value is set for parameter of function **MTMICRLogEnable**. By default, logging is disable.

```
void MTMICRLogEnable (
    BOOL      bEnable
);
```

Parameters

bEnable

a Boolean value indicates logging enabling or disabling request.

Return Values

No return value for this function.

Example

```
if ( hLogFileHandle != NULL )
{
    MTMICRLogEnable(TRUE);
    MTMICRSetLogFileHandle ( hLogFileHandle );
}
```

MTMICRSetLogFileHandle

MTMICRSetLogFileHandle specifies a handle for a log file. All messages and errors created by all API functions will be logged in the log file that has this specified handle. By default, there is no log file.

```
VOID MTMICRSetLogFileHandle (
    HANDLE      hFileHandle
);
```

Parameters

hFileHandle

This is a handle to a file. All the API functions will log errors and information to this log file.

Return Values

No value is returned from this function.

Example

```
#define DEVICE_NAME_LEN 128
int i=1;
DWORD dwResult;
HANDLE fileHandle;
char cDeviceName[DEVICE_NAME_LEN]="";
while ((dwResult = MTMICRGetDevice(i,(char*) cDeviceName)) != MICR_ST_DEVICE_NOT_FOUND)
{
    if (MTMICROpenDevice (cDevicesNames) == MICR_ST_OK)
    {
        //Get timeout
        DWORD timeout;
        HANDLE fileHandle;

        // Create log file and save the handle in fileHandle
        // Pass the handle of the log file
        MTMICRSetLogFileHandle (fileHandle);
        ///close the device

        // Close the log file

        // Close the device
    }
    i++;
}
if (MTMICROpenDevice (cDevicesNames) == MICR_ST_OK)
{
    // Process documents
    //close the device
    MTMICRCloseDevice (cDeviceName);
}
i++;
}
```

MTMICRSETLOGLEVEL

MTMICRSetLogLevel sets the desired level of logging details. There are four levels of details: DLL_INTERNAL, DLL_EXTERNAL, XML_DATA, IMAGE_DATA. By default, none is set.

```
VOID MTMICRSetLogLevel (
    DWORD          dwDebugLevel
);
```

Parameters

dwDebugLevel

This value specifies the type of logging details. The value is composed of one or more of the following:

DBGLOG_DLL_INTERNAL	= 0x0001
DBGLOG_DLL_EXTERNAL	= 0x0002
DBGLOG_DLL_XMLDATA	= 0x0004
DBGLOG_DLL_IMAGEDATA	= 0x0010

Return Values

No value is returned from this function.

Example

```
MTMICRSetLogLevel(DBGLOG_DLL_INTERNAL | DBGLOG_DLL_XMLDATA);
```

Remarks

If DLL_INTERNAL level is set, errors from API functions listed in file MTXMLMCR.h are logged.

If DLL_EXTERNAL level is set, errors from DLL functions which are not listed in MTXMLMCR.h are logged.

If DLL_XMLDATA level is set, the contents of XML document sent to device or received from device are logged,

If DLL_IMAGEDATA level is set, the binary data of an image is logged.

MTMICRCOMInitialize

MTMICRCOMInitialize indirectly executed the function CoInitialize() to enable MSXML COM Object to be instantiable.
By default, CoInitialize() is executed when MTXMLMCR.DLL is loaded.

```
VOID MTMICRCOMInitialize (
    void
);
```

Parameters

NONE

Return Values

No value is returned from this function.

Example

```
MTMICRCOMInitialize();
```

MTMICRCOMUnInitialize

MTMICRCOMInitialize indirectly executed the function CoUninitialize(). By default, CoUninitialize() is executed when MTXXMLMCR.DLL is unloaded.

```
VOID MTMICRCOMUnInitialize (
    void
);
```

Parameters

NONE

Return Values

No value is returned from this function.

Example

```
MTMICRCOMUnInitialize();
```

Remark

When this function is executed, subsequent API calls which require MSXML stop functioning.

MTMICRSetConfigFile

MTMICRSetConfigFile function sets the path and file name of the API configuration file. Default filename is "MICRDEV.INI".

```
VOID MTMICRSetConfigFile (
    LPSTR lpszFile
);
```

Parameters

lpszFile

Null terminated string containing full path to the configuration file.

Return Values

NONE

Example

```
MTMICRSetConfigFile( "c:\myconfig.txt" );
```

Remark

The file must be verified to be accessible before calling this function. Any opened devices should first have its connection closed and the MTMICRGetDevice function will need to be recalled to retrieve the new device name list.

SECTION 4. COMMANDS SENT TO DEVICE

Section 4 describes device commands that can be sent to the MagneSafe Reader **MTMICRSendCommand** (see Section 3). The MagneSafe Reader reply will include the *CommandStatus* and/or *DeviceStatus* sections (and their corresponding Key-Value pairs) as described in later chapters.

The command is sent using a string with the following format:

MSRCommand=[*Command Number*][*Data Length*][*Data*]*[Carriage Return 0x0D]**

*For detailed information on [*Command Number*], [*Data Length*] and [*Data*] you can refer to PN 99875398 “COMMANDS” section page 20.

**Each command and response is composed of a series of readable ASCII characters followed by the ASCII character CR (0x0D). For detailed information on command format, refer to PN 99875398 page 21.

**The response from the MagneSafe Reader is saved in
<DeviceInformation><CommandStatus><ReturnMsg> key.**

The response format is [*Result Code*][*Data Length*][*Data*]*

* For detailed information on the result code refer to PN 99875398 “COMMANDS” section page 20

If the command is NOT correct, the response will be 0200

Note - The total maximum string length is 255 characters.

SECTION 5. KEYS SENT TO DEVICE

Section 5 describes all the Sections (and their corresponding Key-Value pairs) to be sent by the application to the device for document processing. The application can send information the device using the following sections: *Application*, *ProcessOptions*, *Endorser*, and *ImageOptions*.

The following keys are included in the *Application* section:

- Transfer
- DocUnits

The following keys are included in the *ProcessOptions* section:

- ReadMICR
- Endorse
- RespondEarly
- DocFeed
- DocFeedTimeout
- KVErrStop
- MICRFmtCode

The following keys are included in the *Endorser* section:

- PrintData
- PrintFrontData
- PrintFont
- PrintFrontfont
- PrintStyle
- PrintFrontStyle
- PrintRate

The following keys are included in the *ImageOptions* section:

- Number
- ImageColor#
- Resolution#
- Compression#
- FileType#
- ImageSide#
- FilterB
- FilterG
- JPECQC
- JPECQG
- CalculateSHA1

The following keys are included in the *MICROptions* section:

- Threshold
- Quality

SECTION = Application

The *Application* section includes keys to configure some required characteristics of the unit.

Transfer

This key determines the file transfer method.

Values	Value Description
HTTP	Default: Transfer files using HTTP protocol
FTP	Transfer files to FTP server

DocUnits

This key determines the unit of measurement.

Values	Value Description
ENGLISH	Default: Dimensions in thousandths of an inch
METRIC	Dimensions in millimeters

SECTION = ProcessOptions

The *ProcessOptions* section includes keys that control various operational options during the transaction.

ReadMICR

This key selects the MICR font to be read on the check.

Values	Value Description
E13B	Decode only E13B character set
CMC7	Decode only CMC7 character set
ALL	Auto-detect and decode both E13B and CMC7
NO	Suppress MICR reading

Endorse

This key determines what type of printing is required on the check.

Values	Value Description
NO	No printing required
BACK	Request printing on the back (endorsing)
FRONT	Request printing on the front (franking).
BOTH	Request printing on the back and the front (endorsing and franking).

RespondEarly

This key determines if an early response is required from the device.

Values	Value Description
YES	Request device to respond as early as possible. Images may not be ready.
NO	Device responds only when all images are completely processed

DocFeed

This key determines the input tray to be used for document processing.

Values	Value Description
ALL	Auto-detect & process both check and Magstripe card
MANUAL	Process checks from the check entry
ID	Process ID card from card input tray.
MSR	Process Magstripe card from MSR.

DocFeedTimeout

This key specifies the waiting period for a document to be fed.

Values	Value Description
numeric value	Specify a time period in seconds

KVErrStop

This key determines the type of key/value errors that can halt transaction operation.

Values	Value Description
NONE	No restriction
VALS	Invalid values halt the transaction
KEYS	Invalid keys halt the transaction
KEYVALS	Invalid keys and values halt the transaction

MICRFmtCode

This key specifies the pre-defined output format to be use for MICR data.

Values	Value Description
numeric string	Specifies the format code number (refer to Appendix A)

SECTION = Endorser

The *Endorser* section includes keys that control various options for printing on the check.

PrintData

This key specifies the text to be printed on the back of the check (i.e., endorsement message).

Values	Value Description
string	Specifies text for the endorsement message

PrintFrontData

This key specifies the text to be printed on the front of the check (i.e., franking message).

Values	Value Description
string	Specifies text for the franking message

PrintFont

This key determines the internal font to be used for the endorsement message.

Values	Value Description

ImageSafe Windows API Specifications

INTFONT1	Selects internal Font 1 (5x7 bitmap)
INTFONT2	Selects internal Font 2 (7x10 bitmap)

PrintFrontFont

This key determines the internal font to be used for the franking message.

Values	Value Description
INTFONT1	Selects internal Font 1 (5x7 bitmap)
INTFONT2	Selects internal Font 2 (7x10 bitmap)

PrintStyle

This key determines the style of the selected font for the endorsement message.

Values	Value Description
BOLD	Print Bold style
NORMAL	Print normal
WIDE	Print Wide style

PrintFrontStyle

This key determines the style of the selected font for the franking message.

Values	Value Description
BOLD	Print Bold style
NORMAL	Print normal
WIDE	Print Wide style

PrintRate

This key determines the printing rate. This key can be used to control squeezing/condensing of printed characters. Default print rate is 100%. If the value of this key is larger than the default value, the number of characters per inch is increased. The Valid range is 50-250.

Values	Value Description
<i>numeric string</i>	Printing rate

SECTION = ImageOptions

The *ImageOptions* section includes keys that control various options to process the check images. Some of the keys below include the symbol '#' to indicate a variable for the image number. The image number can be 1, 2, 3, or 4 (as specified in the *Number* key). Each image requires its own set of options controlled by the keys *ImageColor#*, *Resolution#*, *Compression#*, *FileType#*, and *ImageSide#*. For example, for image 2, the key names would be *ImageColor2*, *Resolution2*, *Compression2*, *FileType2*, and *ImageSide2*. If image number equals zero, scanning will not take place. All keys in the *ImageOptions* section are ignored.

Number

This key determines how many images will be captured for each check that is processed.

Values	Value Description
numeric value	Specifies number of images to be captured: 1, 2, 3, or 4.
0	If this number equals zero, no image is captured

ImageColor#

This key determines the image rendition for the specified image number.

Values	Value Description
BW	Black and white (i.e., bitonal)
GRAY8	8-bit grayscale
COL24	24-bit color

Resolution#

This key determines the image resolution for the specified image number.

Values	Value Description
100X100	100x100 DPI (dots per inch)
200X200	200x200 DPI (dots per inch)

Compression#

This key determines the algorithm used to compress the captured images.

Values	Value Description
GROUP4	Image will be compressed using Group4 compression type
JPEG	Image will be compressed using JPEG compression type
NONE	No compression

FileType#

This key determines the file type for the specified image number.

Values	Value Description
TIF	Image format type is tiff
JPG	Image format type is jpg
BMP	Image format type is bmp

ImageSide#

This key determines which side of the check will be associated with specified image number.

Values	Value Description
FRONT	Scan the front of image of the check
BACK	Scan the back image of the check

FilterB

This key can be used to change the sharpness and the file size of a black and white (B/W) image. The Default value of this key is 4. For a sharper image, set the value of this key to a smaller number. For a softer image, set the value of this key to a higher number. Too much sharpening can lead to a noisy image and a large file size. The valid range for this key is 1-6.

Values	Value Description
<i>numeric string</i>	Filtering B/W images

FilterG

This key can be used to change the sharpness and file size of a gray scale image. The default value of this key is 2. For a sharper image, set the value of this key to a smaller number. For a softer image, set the value of this key to a higher number. The valid range for this key is 1-6.

Values	Value Description
<i>numeric string</i>	Filtering gray scale images

JPEGQC

This key can be used to set the JPEG compression quality number for color images. The default value for this key is 50. Changing the default value of this key affects the image quality and size of a JPEG file. For higher quality images, set the value of this key to a higher number. The file size also increases when the quality number increases. The valid range for this key is 1-100.

Values	Value Description
<i>numeric string</i>	Quality number for color image

JPEGQG

This key can be used to set the JPEG compression quality number for grayscale images. The default value for this key is 50. Changing the default value of this key affects the image quality and size of a JPEG file. For higher quality images, set the value of this key to a higher number. The file size also increases when the quality number increases. The valid range for this key is 1-100.

Values	Value Description
<i>numeric string</i>	Quality number for grayscale images

CalculateSHA1

This key determines if SHA1 calculation is required for captured images.

Values	Value Description
YES	SHA1 calculation is required
NO	SHA1 calculation is NOT required

SECTION = MICROptions

The *MICROptions* section includes keys that control various options to get MICR character.

Threshold

This value is the minimum signal value used to detect the start of a MICR symbol.

Values	Value Description
<i>numeric value</i>	The minimum signal value to detect the start of a MICR symbol. The default value is 15

Quality

This value is used to determine what quality is required for a character to be valid.

The best range is 85-92.

Values	Value Description
<i>numeric value</i>	Specify what quality is required for a character to be valid. The default value is 90

SECTION 6. KEYS RECEIVED FROM DEVICE

Section 6 describes all the Sections (and their corresponding Key-Value pairs) automatically reported by the device to the application after the requested document has been processed. The device reports information using the following sections: *CommandStatus*, *DocInfo*, *ImageInfo*, and *MSRInfo*.

Note

*All Sections and Key-Value pairs described in this Section
are also available from the device upon query by the application.*

The following keys are included in the *CommandStatus* section:

- CheckDS
- ReturnCode
- ReturnMsg
- KVErrCnt
- KVErrCode#
- KVErrVal#
- ResponseType

The following keys are included in the *DocInfo* section:

- DocUnits
- DocWidth
- DocHeight
- MICRFont
- MICRRaw
- MICRAcct
- MICRAmt
- MICRAux
- MICRBankNum
- MICRChkType
- MICRCountry
- MICRDecode
- MICREPC
- MICROnUs
- MICROut
- MICRSerNum
- MICRTPC
- MICRTransit
- MICRParseSts0
- MICRParseSts1

The following keys are included in the *ImageInfo* section:

- ImageSize#
- ImageURL#
- ImageSHA1Key#
- Number

The following keys are included in the *MSRInfo* section:

- CardType
- MPData
- MPSstatus
- TrackData1
- TrackData2
- TrackData3
- TrackStatus1
- TrackStatus2
- TrackStatus3
- EncryptedTrackData1
- EncryptedTrackData2
- EncryptedTrackData3
- DeviceSerialNumber
- EncryptedSessionID
- DUKPTserialnumber

SECTION = CommandStatus

This *CommandStatus* section includes keys that report various error conditions after a document has been processed.

CheckDS

This key is a general flag for critical device status, and it can be used to prompt applications to check the device status.

Values	Value Description
T	True: a change in the device status has been detected
F	False: everything is OK

ReturnCode

This key specifies the return error code reported by the device after each document transaction.

Values	Value Description
<i>numeric value</i>	For specific return code information refer to tables 6-1 through 6-8

ReturnMsg

This key specifies the return error message associated with the *ReturnCode* key.

Values	Value Description
<i>String</i>	For specific return message information refer to tables 6-1 through 6-8

KVErrCnt

This key specifies the number of key/value errors (i.e., syntax errors) reported by the device.

Values	Value Description
<i>numeric value</i>	Count of key/value errors detected (0-9)

KVErrCode#

This key specifies the key/value error code number reported by the device (up to 9 errors can be reported).

Values	Value Description
<i>numeric value</i>	For specific error code numbers refer to table 6-3

KVErrVal#

This key specifies the invalid key name or value that generated the error (up to 9 errors can be reported).

Values	Value Description
<i>string</i>	Name of the key or value that generated the error

ResponseType

This key is a general flag for data response type. It can be used to prompt the application to send next command.

Values	Value Description
CHECK	The response data include MICR and Image info
MSR	The response data include MSR data or MagneSafe Reader reply info
ID	The response data include ID info
NONE	Only command response

RETURN CODES AND MESSAGES FROM IMAGESAFE

The following tables (Tables 6-1 through 6-8.) list the codes and messages returned by the device using the *ReturnCode* and *ReturnMsg* keys in the *CommandStatus* section.

Table 6-1. Operation Completed

Operation Completed (0-99)	
ReturnCode	ReturnMsg
0	"OK"

Table 6-2. Operation

Operation (100-149)	
ReturnCode	ReturnMsg
101	"Internal Device Failure"
102	"Unrecognized Operation"
103	"Command Format Error"
104	"Requested Operation Failed"
105	"Undetermined Path Error"

Table 6-3. Data Input

Data Input (150-199)	
ReturnCode	ReturnMsg
150	"Data Format Error"
151	"Illegal Value"
152	"Value Out of Range"
153	"String Too Long"
154	"Unrecognized Key"
155	"Unrecognized Section"
156	"Problem parsing XML"

Table 6-4. Path

Path (200-299)	
ReturnCode	ReturnMsg
201	"Access Guide Unlatched"
202	"No Doc Present"
203	"Path Not Clear"
204	"Document Jammed"
205	"Multiple doc feed detected"
206	"Manual detect during Autofeed"
207	"Illegal Doc Feed Option"
208	"Cannot find doc at location for this sequence move"
209	"Check Sequence Aborted by Operator"
210	"Doc Feed Path Error"
250	"Timed out waiting for document"

Table 6-5. Printer

Printer (300-349)	
ReturnCode	ReturnMsg
301	"Print Failed. Internal Error"
302	"Unable to Print Back. No Cartridge"
303	"Unable to Print Front. No Cartridge"
305	"Print Font Not Supported"
306	"Selected Print is Invalid For Selected Sequence "
307	"Endorsing Failed. Internal Error"
308	"Franking Failed. Internal Error"

Table 6-6. MICR

MICR (350-399)	
ReturnCode	ReturnMsg
351	"MICR Failed. Internal Error"
352	"MICR Not Supported"

Table 6-7. Scan/Image

Scan/Image (400-499)	
ReturnCode	ReturnMessage
401	"Scan Failed. Internal Error"
402	"Bad Image"
403	"No Room to Store Image"
404	"Image Store Failed"
405	"Scan Side is Invalid For Selected Sequence"
421	"Scan Calib Black White Delta out of range"
422	"Scan Calib PGA Code out of range"
423	"Scan Calib DAC Code out of range"
424	"Scan Calib Consume and Park Check Failed"
425	"Scan Calib Save Data Failed"
426	"Scan Calib Shade Gain out of range"
427	"Scan Calib VPMAX out of range"
428	"Scan Calib VPAVG out of range"
429	"Scan Calib Get Data Failed, Factory Setting used"
430	"Scan Calib Get Calib Data Failed"
431	"Scan Calib LED Calib failed"
432	"Scan Calib check not found"
433	"Scan Calib Move Check to SB1 failed"
434	"Scan Calib Move Check to SB2 failed"
440	"Sensor Calib failed"

Table 6-8. Miscellaneous

Miscellaneous (500-599)	
Return Code	Return Message
501	"No RTC Support"
502	"RTC Battery Low"

SECTION = DocInfo

The *DocInfo* section includes keys that report on various attributes of the check document and information on the MICR data read from the check.

DocUnits

This key specifies the units of measurement used to report on check document dimensions (see the *DocWidth* and *DocHeight* keys below).

Values	Value Description
ENGLISH	Dimensions in thousands of an inch
METRIC	Dimensions in millimeters

DocWidth

This key specifies the width of the check document based on the scanned image.

Values	Value Description
numeric value	Width dimension of scanned document

DocHeight

This key specifies the height of the check document based on the scanned image.

Values	Value Description
numeric value	Height dimension of scanned document

MICRFont

This key specifies the MICR font detected and read from the check.

Values	Value Description
E13B	E13B font was detected on the check read
CMC7	CMC7 font was detected on the check read

Note

*The parsed MICR fields below only apply to U.S. checks with E13B font.
CMC7 Checks are not parsed, and only the raw MICR line is reported.*

MICRRaw

This key specifies the unformatted (as-is) MICR data read from the check.

Values	Value Description
string	Unformatted MICR data

MICRAcc

This key specifies the account number MICR field read from the check.

Values	Value Description
string	Account number MICR field

MICRAmt

This key specifies the amount MICR field read from the check.

Values	Value Description
<i>string</i>	Amount MICR field

MICRAux

This key specifies the Auxiliary On-Us MICR field read from the check.

Values	Value Description
<i>string</i>	Auxiliary On-Us MICR field

MICRBankNum

This key specifies the 4-digit ABA Identifier MICR field read from the check.

Values	Value Description
<i>string</i>	ABA Institution Identifier (bank number) MICR field

MICRChkType

This key specifies the check type based on the presence on the Auxiliary On-Us MICR field.

Values	Value Description
PERSONAL	Auxiliary On-Us MICR field NOT present
BUSINESS	Auxiliary On-Us MICR field present

MICRCountry

This key specifies the country of origin based on known MICR line formats.

Values	Value Description
USA	Check drawn in USA
CANADIAN	Check drawn in Canada
MEXICAN	Check drawn in Mexico

MICRDecode

This key indicates whether a MICR decode/read error was detected.

Values	Value Description
NONE	No MICR data detected
OK	MICR decode/read was successful
ERROR	Error detected in MICR decode/read operation

MICREPC

This key specifies the EPC MICR field read from the check.

Values	Value Description
<i>string</i>	EPC MICR field

MICROnUs

This key specifies the On-Us MICR field read from the check.

Values	Value Description
<i>string</i>	On-Us MICR field

MICROut

This key specifies the formatted MICR output data read from the check as defined by the *MICRFmtCode* key in Section=ProcessOptions.

Values	Value Description
<i>string</i>	Formatted MICR output data

MICRSerNum

This key specifies the sequence number MICR field read from the check.

Values	Value Description
<i>string</i>	Sequence number (or check number) MICR field

MICRTPC

This key specifies the TPC MICR field read from the check.

Values	Value Description
<i>string</i>	TPC MICR field

MICRTransit

This key specifies the 9-digit Transit MICR field read from the check.

Values	Value Description
<i>string</i>	Transit MICR field

MICRParseSts0

This key specifies a 4-digit status/error code reported by the device after parsing the MICR fields read from the check.

Values	Value Description
<i>numeric value</i>	For specific status/error code information refer to table 6-9

Table 6-9. MICRPARSESTS0

Digit	
1 st Digit	0 – OK MICR
	1 – Low MICR
	2 – No MICR
2 nd Digit	0 – Standard Check
	1 – Business Check
	2 – Mexican Check
	3 – Canadian Check
3 rd Digit	0 – No Status
	1 – Amount Present
	2 – Short Account
	3 – Short Account + Amount Present
	4 – No Check#
	5 – No Check# + Amount Present
	6 – No Check# + Short Account
	7 – No Check# + Short Account + Amount Present
4 th Digit	0 – No Errors
	1 – Chk#
	2 – Account
	3 – Account + Chk#
	4 – Transit
	5 – Transit + Chk#
	6 – Transit + Account
	7 – Transit + Account + Chk#

MICRParseSts1

This key specifies a 2-digit status/error code reported by the device after parsing the MICR fields read from the check.

Values	Value Description
numeric value	For specific status/error code information refer to table 6-10

Table 6-10. MICRPARSESTS1

PRIORITY	MICRParseSts1	TYPE	DESCRIPTION
10	01	Error	No MICR data: no transit and no account found
9	09	Status	Mexican check
8	08	Status	Canadian check
7	05	Error	No transit, bad character, bad length, bad check digit
6	07	Error	No account, bad character
5	04	Error	Bad character in check number
5	04	Status	No check number
4	12	Status	Short Account (maybe caused by mis-parsed check#)
3	03	Status	Low MICR signal, good read
2	10	Status	Business check
1	11	Status	Amount field present
0	00	Status	No error, check OK

Notes:

- The LED indicator will turn red on all error conditions.
- The absence of a check number is not considered an error.
- If a multiple error occurs, the error or status code with the highest priority is reported.
- All unreadable MICR characters are transmitted as an "?" ASCII character (hex 3F), except for Format 00xx.

SECTION = ImageInfo

The *ImageInfo* section includes keys that report on various attributes of the scanned images. Some of the keys below include the symbol '#' to indicate a variable for the image number. The image number can be 1, 2, 3, or 4 (up to 4 images as specified in the *Number* key below). The device reports image information using the keys *ImageSize#*, *ImageURL#*, and *ImageSHA1#*. For example, for image 2, the key names would be *ImageSize2*, *ImageURL2*, and *ImageSHA1Key2*.

The following tags are included in every image file (TIFF tags for black and white images; EXIF tags for JPEG files):

Tag #	Tag Name	Content
270	IMAGE DESCRIPTION	Contains raw MICR line
271	MAKE	"MagTek, Inc."
272	MODEL	"ImageSafe (unit's serial number)"
305	SOFTWARE	[firmware version]
315	AUTHOR	Magtek,FB=#,FG=#,QC=#,QG=#. The # symbol refers to the settings for FilterB, FilterG, JPEGQC, JPEGQG (see the <i>ImageOptions</i> section in Section 5).

ImageSize#

This key specifies the size (in bytes) for the specified Image number. The number of scanned images and their availability is determined by the *Number* key in Section=*ImageOptions*.

Values	Value Description
numeric value	Number of bytes

ImageURL#

This key specifies the URL string needed to request the specified Image number using the **MTMICRGetImage** API function.

Values	Value Description
string	URL string to indicate internal file path for the Image

ImageSHA1Key#

This key contains the SHA1 key calculation for the specified Image number (if requested and available).

Values	Value Description
string	SHA1 Key string for the image

Number

This key specifies the number of scanned images ready and available from the device.

Values	Value Description
numeric value	Number of scanned images

SECTION = MSRInfo

The *MSRInfo* section includes keys that report on the information captured from the magnetic stripe card.

CardType

This key specifies the standard encoding format detected on the magnetic stripe card.

Values	Value Description
NONE	Unknown Card Type
ISO	ISO format
CADL	Old California Drive License format
AAMVA	American Association Motor Vehicle Administrators format

MPData

This key specifies the MagnePrint data read from the magnetic stripe card.

Values	Value Description
string	Please contact MagTek for the use of MagnePrint data

MPStatus

This key specifies the MagnePrint status reported by the device.

Values	Value Description
string	Please contact MagTek for the use of MagnePrint data

TrackData1

This key specifies the Track 1 data read from the magnetic stripe card.

Values	Value Description
string	Track 1 data on magnetic stripe card

TrackData2

This key specifies the Track 2 data read from the magnetic stripe card.

Values	Value Description
string	Track 2 data on magnetic stripe card

TrackData3

This key specifies the Track 3 data read from the magnetic stripe card.

Values	Value Description
string	Track 3 data on magnetic stripe card

TrackStatus1

This key indicates whether a decode/read error was detected while reading Track 1.

Values	Value Description
NONE	No status
OK	No read error detected
ERROR	Read error detected

TrackStatus2

This key indicates whether a decode/read error was detected while reading Track 2.

Values	Value Description
<i>NONE</i>	No status
<i>OK</i>	No read error detected
<i>ERROR</i>	Read error detected

TrackStatus3

This key indicates whether a decode/read error was detected while reading Track 3.

Values	Value Description
<i>NONE</i>	No status
<i>OK</i>	No read error detected
<i>ERROR</i>	Read error detected

EncryptedTrackData1

This key specifies the Encrypted Track 1 data read from the magnetic stripe card. The Encrypted Track data is only in MagneSafe Reader Security Level 3.

Values	Value Description
<i>string</i>	Encrypted Track 1 data on magnetic stripe card

EncryptedTrackData2

This key specifies the Encrypted Track 2 data read from the magnetic stripe card. The Encrypted Track data is only in MagneSafe Reader Security Level 3.

Values	Value Description
<i>string</i>	Encrypted Track 2 data on magnetic stripe card

EncryptedTrackData3

This key specifies the Encrypted Track 3 data read from the magnetic stripe card. The Encrypted Track data is only in MagneSafe Reader Security Level 3.

Values	Value Description
<i>string</i>	Encrypted Track 3 data on magnetic stripe card

DeviceSerialNumber

This key specifies the Device Serial Number from MagneSafe Reader.

Values	Value Description
<i>string</i>	Track 1 data on magnetic stripe card

EncryptedSessionID

This key specifies the Track Encrypted Session ID from MagneSafe Reader.

Values	Value Description
<i>string</i>	Track 2 data on magnetic stripe card

DUKPTserialnumber

This key specifies the DUKPT serial number from MagneSafe Reader.

Values	Value Description
<i>string</i>	Track 3 data on magnetic stripe card

SECTION 7. OTHER KEYS AVAILABLE FROM DEVICE

Section 7 describes other Sections (and their corresponding key-value pairs) available from the device upon query by the application. The device can report these additional sections: *DeviceUsage*, *DeviceCapabilities* and *DeviceStatus*.

The following keys are included in the *DeviceCapabilities* section:

- AutoFeed
- IDScan
- MagStripe
- MagnePrint
- Endorse
- Firmware
- Image
- MICR
- UnitSerialNumber
- Stamp
- MachineType
- USBDriver
- ExpressCapable

The following keys are included in the *DeviceStatus* section:

- State
- Path
- Printer
- ScanCalibStatus
- SnsrCalibStatus
- ExpressEnabled
- USBSpeed
- StartTimeout
- RawSensors

SECTION = DeviceCapabilities

The *DeviceCapabilities* section includes keys that report on the general capabilities of the device.

AutoFeed

This key indicates whether an auto-feed input tray is available on the device.

Values	Value Description
T	True: auto-feed input tray is available
F	False: auto-feed input tray is NOT available

IDScan

This key indicates whether the device is capable ID scanning ID cards.

Values	Value Description
T	True: ID card scanning is available
F	False: ID card scanning is NOT available

MagStripe

This key indicates whether an integrated MSR (Magnetic Stripe Reader) is available on the device.

Values	Value Description
T	True: MSR is available
F	False: MSR is NOT available

MagnePrint

This key indicates whether an integrated MagnePrint reader is available on the device.

Values	Value Description
T	True: MagnePrint is available
F	False: MagnePrint is NOT available

Endorse

This key indicates what print capabilities are available on the device.

Values	Value Description
BOTH	Device can print on the front and the back of the document
FRONT	Device can only print on the front of the document
BACK	Device can only print on the back of the document
NONE	Device does not have printing capabilities

Firmware

This key specifies the version of the firmware installed in the device.

Values	Value Description
string	Firmware version

Image

This key indicates what check scanning capabilities are available on the device.

Values	Value Description
BOTH	The device scans the front and back images of the check
FRONT	The device can only scan the front image of the check
BACK	The device can only scan the back image of the check
NONE	The device cannot scan any images

MICR

This key indicates whether the device is capable if reading MICR data.

Values	Value Description
T	True: device can read MICR data
F	False: device can NOT read MICR data

UnitSerialNumber

This key specifies the serial number of the device.

Values	Value Description
string	Device serial number

Stamp

This key indicates whether the device has stamping capability.

Values	Value Description
BOTH	The device has stamping capability on the front and the back printers
FRONT	The device has stamping capability on the front printer only
BACK	The device stamping capability on the back printer only
NONE	The device does not have stamping capability

MachineType

This key indicates the type of ImageSafe device connected.

Values	Value Description
IMAGESAFE	The device connected is ImageSafe

USBDriver

This key indicates the USB driver configuration for the ImageSafe device.

Values	Value Description
MAGUSB	ImageSafe is configured for MagTek USB drivers
RNDIS	ImageSafe is configured for RNDIS USB drivers

ExpressCapable

This key specifies if ImageSafe can run “express mode”.

Values	Value Description
TRUE	The USB speed is USB2.0 - the device can run “express mode”
FALSE	The USB speed is USB1.1 - the device can NOT run “express mode”

SECTION = DeviceStatus

The *DeviceStatus* section includes keys that report general operational status of the device.

State

This key specifies the general status of the device.

Values	Value Description
ONLINE	Device is connected and online; device is ready to process check
ERROR	Device is not ready to process check

Path

This key specifies status of the check path.

Values	Value Description
OK	Check path is clear
ERROR	Check path is not clear

ScanCalibStatus

This key specifies the status of the most recent scanner calibration performed on the device. It is highly recommended to keep the factory calibration. Any calibration performed by the user will take precedence over the factory calibration. If the user calibration is invalid, the device uses factory calibration.

Values	Value Description
NONE	The device is not calibrated
FACTORY	The device is using factory calibration
USER	The device is using the user calibration
ERROR	Neither the factory nor user calibration is valid

SnsrCalibStatus

This key specifies the status of the most recent sensor calibration performed on the device.

Values	Value Description
NONE	The sensor is not calibrated
FACTORY	The sensor is using factory calibration data
ERROR	The calibration data is invalid

ExpressEnabled

This key specifies if ImageSafe is set as “express mode”.

Values	Value Description
TRUE	The device is set as express mode
FALSE	The device is set as normal mode*

*If the USB speed is USB1.1, the device is ALWAYS set as normal mode. This value is ALWAYS set as “FALSE”.

USBSpeed

This key specifies the protocol of USB connection.

Values	Value Description
HI	The current USB connection is USB2.0
LOW	The current USB connection is USB1.1

StartTimeout

This key specifies the firmware Timeout on check entry.

Values	Value Description
<i>numeric value</i>	Time, in milliseconds

RawSensors

This key contains a decimal number that can be masked to determine the status of a particular sensor or the status of a print cartridge or the status of the cover switch. When the value of a masked bit equals zero, this typically indicates a normal or default operational state. For example, depending on the masked bit, the zero value may indicate that the cover is detected, the ink cartridge is installed, or the sensor is unblocked.

Masked Values	Value Description for Excella STX
0x00001	0 = sensor at check entry 1 unblocked
0x00002	0 = sensor at check entry 2 unblocked
0x00004	0 = sensor at entry pinch unblocked
0x00008	0 = sensor at MICR head unblocked
0x00010	0 = sensor just past back printer unblocked
0x00020	0 = sensor just before front printer unblocked
0x00040	0 = sensor at exit pinch unblocked
0x00080	0 = sensor at exit 2 unblocked
0x00100	0 = sensor at exit 1 unblocked
0x00400	0 = back ink cartridge installed
0x00800	0 = front ink cartridge installed
0x10000	0 = cover detected

Masked Values	Value Description for Excella
0x0001	0 = sensor at manual feeder unblocked
0x0002	0 = sensor at MICR head unblocked
0x0004	0 = sensor just past back printer unblocked
0x0008	0 = sensor at exit pinch unblocked
0x0020	0 = sensor at auto feeder unblocked
0x0040	0 = access guide latched
0x0080	0 = sensor at operator button unblocked
0x0100	0 = back ink cartridge installed

SECTION 8. EXAMPLES OF KEY-VALUE PAIRS

This section contains examples of key-value pairs send to the ImageSafe device and the key-value pairs returned from ImageSafe device when requesting four images without endorsement. The corresponding key-value pairs for these examples are also provided in XML format. The examples include key-value pairs for querying the ImageSafe device. These are key-value pairs in the *DeviceStatus*, *DeviceCapabilities*, and *DeviceUsage*.

EXAMPLE 1: REQUESTING TWO IMAGES WITH ENDORSEMENT AND FRANKING

Key-Value Pairs Sent by Host Application to Excella Device

Section: Application

Key	Value
Transfer	HTTP
DocUnits	ENGLISH

Section: ProcessOptions

Key	Value
ReadMICR	E13B
Endorse	BOTH
DocFeed	MANUAL
RespondEarly	YES

Section ImageOptions

Key	Value
Number	2
ImageColor1	COL24
Resolution1	100x100
Compression1	JPEG
FileType1	JPG
ImageSide1	FRONT
ImageColor2	COL24
Resolution2	100x100
Compression2	JPEG
FileType2	JPG
ImageSide2	BACK

Section: Endorser

Key	Value
PrintFont	INTFONT2
PrintData	VOID-VOID-VOID
PrintStyle	NORMAL
PrintFrontFont	INTFONT2
PrintFrontStyle	NORMAL
PrintFontData	VOID-VOID-VOID

Key-Value Pairs Sent by STXDemo Application to Excella Device in XML Format

```
<DeviceSettings>
  <ImageOptions>
    <Number>2</Number>
    <ImageSide1>FRONT</ImageSide1>
    <ImageSide2>BACK</ImageSide2>
    <ImageColor1>COL24</ImageColor1>
    <Resolution1>100x100</Resolution1>
    <Compression1>JPEG</Compression1>
    <FileType1>JPG</FileType1>
    <ImageColor2>COL24</ImageColor2>
    <Resolution2>100x100</Resolution2>
    <Compression2>JPEG</Compression2>
    <FileType2>JPG</FileType2>
  </ImageOptions>
  <Application>
    <Transfer>HTTP</Transfer>
    <DocUnits>ENGLISH</DocUnits>
  </Application>
  - <Endorser>
    <PrintStyle>NORMAL</PrintStyle>
    <PrintFrontStyle>NORMAL</PrintFrontStyle>
    <PrintFont>INTFONT2</PrintFont>
    <PrintFrontFont>INTFONT2</PrintFrontFont>
    <PrintData>VOID-VOID-VOID</PrintData>
    <PrintFrontData> VOID-VOID-VOID </PrintFrontData>
  </Endorser>
  - <ProcessOptions>
    <ReadMICR>E13B</ReadMICR>
    <Endorse>BOTH</Endorse>
    <DocFeed>MANUAL</DocFeed>
    <RespondEarly>YES</RespondEarly>
  </ProcessOptions>
</DeviceSettings>
```

Key-Value Pairs Returning from Excella Device

Section CommandStatus

Key	Value
BadData	NONE
CheckDS	F
ReturnCode	0
ReturnMsg	OK

Section ImageInfo

Key	Value
ImageSize1	40481
ImageSize2	21587
ImageURL1	/chkimg/FRONTCOL24Image1_0023.JPG
ImageURL2	/chkimg/BACKCOL24Image2_0023.JPG
Number	2

Section 8. Examples of Key-Value Pairs

Section DocInfo

Key	Value
DocHeight	2990
DocUnits	ENGLISH
DocWidth	8000
MICRAcc	123456789
MICRAmt	
MICRAux	007751
MICRBankNum	0021
MICRChkType	BUSINESS
MICRCountry	USA
MICRDecode	OK
MICREPC	
MICRFont	E13B
MICROnUs	123456789U 11
MICROut	C/122000218/123456789/007751/0100
MICRParseSts0	0100
MICRParseSts1	11
MICRRaw	U007751U T122000218T123456789U 11
MICRSerNum	007751
MICRTPC	11
MICRTransit	122000218

Section DeviceStatus

Key	Value
AccessGuide	LATCHED
AutoFeeder	NOTSUP
ExpressEnabled	TRUE
FrontInk	OK
FrontPrinter	PRESENT
IDFeeder	EMPTY
Ink	OK
Lamp1	OK
Lamp2	OK
ManualFeeder	EMPTY
Path	OK
Printer	PRESENT
RTC Battery	OK
RawSensors	384
ScanCalibStatus	FACTORY
SnsrCalibStatus	FACTORY
StartTimeout	4000
State	ONLINE
USBSpeed	HI

Key-Value Pairs Returning From Excella Device In XML Format

```

<DeviceInformation>
  <CommandStatus>
    <BadData>OK</BadData>
    <CheckDS>F</CheckDS>
    <ReturnCode>0</ReturnCode>
    <ReturnMsg>OK</ReturnMsg>
  </CommandStatus>
  <DeviceStatus>

```

```
<AccessGuide>LATCHED</AccessGuide>
<AutoFeeder>NOTSUP</AutoFeeder>
<ExpressEnabled>TRUE</ExpressEnabled>
<FrontInk>OK</FrontInk>
<FrontPrinter>PRESENT</FrontPrinter>
<IDFeeder>EMPTY</IDFeeder>
<Ink>OK</Ink>
<Lamp1>OK</Lamp1>
<Lamp2>OK</Lamp2>
<ManualFeeder>EMPTY</ManualFeeder>
<Path>OK</Path>
<Printer>PRESENT</Printer>
<RTCBattery>OK</RTCBattery>
<RawSensors>384</RawSensors>
<ScanCalibStatus>FACTORY</ScanCalibStatus>
<SnsrCalibStatus>FACTORY</SnsrCalibStatus>
<StartTimeout>4000</StartTimeout>
<State>ONLINE</State>
<USBSpeed>HI</USBSpeed>
</DeviceStatus>
<DocInfo>
    <DocHeight>2990</DocHeight>
    <DocUnits>ENGLISH</DocUnits>
    <DocWidth>8000</DocWidth>
    <MICRAcct>123456789</MICRAcct>
    <MICRAmt></MICRAmt>
    <MICRAux>007751</MICRAux>
    <MICRBankNum>0021</MICRBankNum>
    <MICRChkType>BUSINESS</MICRChkType>
    <MICRCountry>USA</MICRCountry>
    <MICRDecode>OK</MICRDecode>
    <MICREPC></MICREPC>
    <MICRFont>E13B</MICRFont>
    <MICROnUs>123456789U 11</MICROnUs>
    <MICROut>C/122000218/123456789/007751/0100</MICROut>
    <MICRParseSts0>0100</MICRParseSts0>
    <MICRParseSts1>11</MICRParseSts1>
    <MICRRaw>U007751U T122000218T123456789U 11</MICRRaw>
    <MICRSerNum>007751</MICRSerNum>
    <MICRTPC>11</MICRTPC>
    <MICRTransit>122000218</MICRTransit>
</DocInfo>
<ImageInfo>
    <ImageSize1>40481</ImageSize1>
    <ImageSize2>21587</ImageSize2>
    <ImageURL1>/chkimg/FRONTCOL24Image1_0023.JPG</ImageURL1>
    <ImageURL2>/chkimg/BACKCOL24Image2_0023.JPG</ImageURL2>
    <Number>2</Number>
</ImageInfo>
</DeviceInformation>
```

EXAMPLE 2: DEVICE STATUS REPORTED BY IMAGESAFE DEVICE

Section = DeviceStatus

Key	Value
AccessGuide	LATCHED
AutoFeeder	NOTSUP
ExpressEnabled	TRUE
FrontInk	OK
FrontPrinter	PRESENT
IDFeeder	EMPTY
Ink	OK
Lamp1	OK
Lamp2	OK
ManualFeeder	EMPTY
Path	OK
Printer	PRESENT
RTCBattery	OK
RawSensors	384
ScanCalibStatus	FACTORY
SnsrCalibStatus	FACTORY
StartTimeout	4000
State	ONLINE
USBSpeed	HI

DEVICE STATUS REPORTED BY EXCELLA DEVICE IN XML FORMAT

```
<DeviceInformation>
  - <DeviceStatus>
    <AccessGuide>LATCHED</AccessGuide>
    <AutoFeeder>NOTSUP</AutoFeeder>
    <ExpressEnabled>TRUE</ ExpressEnabled >
    <FrontInk>OK</FrontInk>
    <FrontPrinter>PRESENT</FrontPrinter>
    <IDFeeder>EMPTY</IDFeeder>
    <Ink>OK</Ink>
    <Lamp1>OK</Lamp1>
    <Lamp2>OK</Lamp2>
    <ManualFeeder>EMPTY</ManualFeeder>
    <Path>OK</Path>
    <Printer> PRESENT </Printer>
    <RTCBattery>OK</RTCBattery>
    <RawSensors>384</RawSensors>
    <ScanCalibStatus>FACTORY</ScanCalibStatus>
    <SnsrCalibStatus>FACTORY</SnsrCalibStatus>
    <StartTimeout>4000</StartTimeout>
    <State>ONLINE</State>
    <USBSpeed>HI</USBSpeed>
  </DeviceStatus>
</DeviceInformation>
```

EXAMPLE 3: DEVICE CAPABILITIES REPORTED BY EXCELLA DEVICE

Section=DeviceCapabilities

Key	Value
AutoFeed	F
Color	BOTH

Endorse	BOTH
ExpressCapable	TRUE
Firmware	MS1.01.25K
IDScan	T
Image	BOTH
MICR	T
MachineType	ExcellaSTX
MagStripe	T
MagnePrint	T
Stamp	NONE
USBDriver	RNDIS
UnitSerialNumber	NONE

DEVICE CAPABILITIES REPORTED BY EXCELLA DEVICE IN XML FORMAT

```
- <DeviceInformation>
  - <DeviceCapabilities>
    <AutoFeed>F</AutoFeed>
    <Color>BOTH</Color>
    <Endorse>BOTH</Endorse>
    <ExpressCapable>TRUE</ ExpressCapable>
    <Firmware>MS1.01.25K</Firmware>
    <IDScan>T</IDScan>
    <Image>BOTH</Image>
    <MICR>T</MICR>
    <MachineType>ExcellaSTX</MachineType >
    <MagStripe>T</MagStripe>
    <MagnePrint>T</MagnePrint>
    <Stamp>NONE</Stamp>
    <USBDriver>RNDIS</USBDriver>
    <UnitSerialNumber>NONE</UnitSerialNumber>
  </DeviceCapabilities>
</DeviceInformation>
```

EXAMPLE 4: DEVICE USAGE REPORTED BY EXCELLA DEVICE

Section=DeviceUsage

Key	Value
CardsRead	15
CardsScanned	4
ChecksRead	39
DocsRead	47
HoursOn	162
HoursOp	2382
InkUsed	12301
FrontInkUsed	10894

DEVICE USAGE REPORTED BY EXCELLA DEVICE IN XML FORMAT

```
- <DeviceInformation>
:   <DeviceUsage>
:     <CardsRead>15</CardsRead>
:     <CardsScanned>4</CardsScanned>
:     <ChecksRead>39</ChecksRead>
:     <DocsRead>47</DocsRead>
:     <FrontInkUsed>10894</FrontInkUsed>
:     <HoursOn>162</HoursOn>
:     <HoursOp>2382</HoursOp>
:     <InkUsed>12301</InkUsed>
   </DeviceUsage>
</DeviceInformation>
```


APPENDIX A. FORMAT LIST

For check reading, the ImageSafe device provides the flexibility to format the MICR fields and build a specific output string that will be transmitted to the Host. These output strings are referred to as Formats. The ImageSafe device has a built-in list of Formats (described below) from which the user may select one to become the active Format every time a check is read. The Formats may be selected using the Key- Pair Values described in Section 8.

Each Format is assigned a 4-digit number. The first two digits indicate the Format number, and the last two digits are specific parameters used for various functions by each Format. For example, in Format “0415”, the “04” refers to Format number 4 and the 15 refers the maximum number of characters allowed for the account field.

Note

*The formats listed in this section apply only to U.S. and Canadian checks.
The MICR line on checks from other countries will not be broken or parsed
as described in these formats.*

A complete description for each Format follows.

Fmt 00xx: Raw Data Format - sends the entire MICR line - where:

xx - specify what symbol set to use. Choose from the table
Add xx + 16 - change multiple spaces to one space
Add xx + 32 - Remove all spaces

Examples:

MICR LINE: T122000218T 1234 5678 9U 1321
FC0001 - t122000218t 1234 5678 9o 1321
(+16) FC0017 - t122000218t 1234 5678 9o 1321
(+32) FC0033 - t122000218t123456789o1321.

xx	Transit	On-US	Amount	Dash	Error
00	T	U	\$	-	?
01	t	o	a	d	?
02	T	O	A	D	?
03	T	U	\$	-	*
04	T	U	\$	0	?
05	T	U	\$	0	*
06	t	o	a	0	?
07	T	U	\$	none	?

Fmt 01xx: Parsed Text Format

FC0100 - Parsed text with dashes
FC0101 - Parsed text, replace dashes with "d"
Field Labels - TR-transit, AC-account #, CK-check #, AM-amount, TP-tpc,
EP-epc
Example: - PTTR44445556;AC 999-222-3;CK11045

Fmt 02xx: Parsed Text Format with Error Labels

FC0200 - Parsed text with dashes
FC0201 - Parsed text, replace dashes with "d"
Error Labels - PE-parsed error, NE-no error, TR-transit error,
 CK-chk # error, TC-transit check digit error,
 AM-amount error, OU-on us/account# error, TP-tpc error
Examples: - PTTR444455556;AC999-222-3;CK11045/PENE
 - PTTR111?11111;AC123456/PETR ("?" = unreadable character)

Fmt 03xx: [acct #]

- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - keep spaces and dashes

Fmt 04xx: [acct #]

- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - remove spaces and dashes

Fmt 05xx: [acct #]

- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - replace spaces and dashes with zeros

Fmt 06xx: [acct #]

- [acct #]:
 - always xx characters, zero filled;
 - when xx=00 all characters are sent
 - replace spaces and dashes with zeros

Fmt 07xx: [acct #]

- [acct #]:
 - always xx characters, zero filled;
 - when xx=00 all characters are sent
 - remove spaces and dashes

Fmt 08xx: [transit] [acct #]

- [transit]:
 - all characters in the field
 - keep dashes
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - remove spaces and dashes

Fmt 09xx: [transit] [acct #]

- [transit]:
 - all characters in the field
 - keep dashes
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - replace spaces and dashes with zeros

Fmt 10xx: [transit] [acct #]

- [transit]:
 - all characters in the field
 - keep dashes
- [acct #]:
 - always xx characters, zero filled;
 - when xx=00 all characters are sent
 - replace spaces and dashes with zeros

Fmt 11xx: [transit] 'T' [acct #] 'A' [check #]

- [transit]:
 - all characters in the field
 - keep dashes
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - remove spaces and dashes
- [check #]:
 - all characters in the field

Fmt 12xx: [transit] 'T' [acct #] 'A' [check #]

- [transit]:
 - all characters in the field
 - keep dashes
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - remove spaces and dashes
- [check #]:
 - always 6 characters, zero filled

Fmt 13xx: [transit] 'T' [acct #] 'A' [check #] '000'

- [transit]:
 - all characters in the field
 - keep dashes
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - remove spaces and dashes
- [check #]:
 - always 6 characters, zero filled

Fmt 14xx: [transit] [acct #] [check #]

- [transit]:
 - all characters in the field
 - keep dashes
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - remove spaces and dashes
- [check #]:
 - always 6 characters, zero filled

Fmt 15xx: [bank #] [acct #]

- [bank #]:
 - all characters in the field
 - keep spaces and dashes
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - remove spaces and dashes

Fmt 16xx: [bank #] [chk dgt] [acct #]

- [bank #]:
 - all characters in the field
 - keep spaces and dashes
- [chk dgt]:
 - all characters (one character long)
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - remove spaces and dashes

Fmt 17xx: [transit] [acct #]

- [transit]:
 - all characters in the field
 - keep dashes
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - keep spaces and dashes

Fmt 18xx: [acct #] "/" [check #]

- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - keep spaces and dashes
- [check #]:
 - all characters in the field

Fmt 19xx: [transit] [acct #] [check #]

- [transit]:
 - all characters in the field
 - keep dashes
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - replace spaces and dashes with zeros
- [check #]:
 - all characters in the field

Fmt 20xx: [transit] [acct #] <CR> [check #]

- [transit]:
 - all characters in the field
 - keep dashes
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - replace spaces and dashes with zeros
- [check #]:
 - all characters in the field

Fmt 21xx: [transit] [acct #] [check #]

- [transit]:
 - all characters in the field
 - keep dashes
- [acct #]:
 - always xx characters, zero filled;
 - when xx=00 all characters are sent
 - replace spaces and dashes with zeros
- [check #]:
 - all characters in the field

Fmt 22xx: [bank #] [acct #] [check #]

- [bank #]:
 - all characters in the field
 - keep dashes
- [acct #]:
 - always xx characters, zero filled;
 - when xx=00 all characters are sent
 - replace spaces and dashes with zeros
- [check #]:
 - all characters in the field

Fmt 23xx: [error #] [transit] [acct #] [check #] 's'

- [error #]:
 - one digit, always present
 - '0' read OK
 - '1' read error: bad char, empty field, invalid length, validation
- [transit]:
 - always 9 characters, zero filled
 - keep dashes
- [acct #]:
 - always xx characters, trailing spaces;
 - when xx=00 all characters are sent
 - remove spaces and dashes
- [check #]:
 - always 6 characters, zero filled
 - remove spaces and dashes

ImageSafe Windows API Specifications

Fmt 24xx: [transit] 'T' [acct #] 'A' [check #] 'C' [amount] '\$'

- [transit]:
 - all characters in the field
 - keep dashes
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - remove spaces and dashes
- [check #]:
 - always 6 characters, zero filled
- [amount]:
 - all characters in the field

Fmt 25xx: 'M' 'C' [transit] 'D' [acct #] 'E' [check #]

- [transit]:
 - all characters in the field
 - remove dashes and keep spaces (contig spcs = 1 spc)
 - if the field is empty, remove 'C'
- [acct #]:
 - include leading characters
 - maximum of xx characters; when xx=00 all characters are sent
 - remove dashes and keep all spaces
 - if the field is empty, remove 'D'
- [check #]:
 - all characters in the field
 - if the field is empty, remove 'E'

Fmt 26xx: [acct #]

- [acct #]:
 - work with characters in acct and transit fields
 - a window of xx characters; xx must be greater than 00
 - remove spaces and dashes

Fmt 27xx: [acct #]

- [acct #]:
 - work with characters in the acct field only
 - a window of xx characters; xx must be greater than 00
 - remove spaces and dashes

Fmt 28xx: [acct #]

- [acct #]:
 - work with characters in the acct field only
 - a window of xx characters; xx must be greater than 00
 - minimum of 6 digits, fill with zeros if necessary
 - remove spaces and dashes

Fmt 29xx: 'C' '/' [**transit**] '/' [**acct #**] '/' [**check #**] '/' [**status**]

- [**transit**]: - all characters in the field
 - keep dashes
- [**acct #**]: - maximum of xx characters; when xx=00 all characters are sent
 - remove spaces and dashes
- [**check #**]: - maximum of 6 digits
- [**status**]: - this is a programmable option that must be enabled (See Table 2-4).

Fmt 30xx: [**zero fill**] [**transit**] [**acct #**]

- [**zero fill**]: - if length of (transit+account) is less than xx;
 xx must be greater than 00
- [**transit**]: - all characters in the field
 - remove dashes
- [**acct #**]: - all characters in the field
 - remove spaces and dashes

Fmt 31xx: [**transit**] '/' [**acct #**] '/' [**check #**]

- [**transit**]: - all characters in the field
 - remove dashes
- [**acct #**]: - maximum of xx characters; when xx=00 all characters are sent
 - remove spaces and dashes
- [**check #**]: - maximum of 10 digits
 - remove spaces and dashes
 - if no check number, remove preceding slash ('/')

Fmt 3200: '^' [**transit**] '^' [**acct #**] '^' [**check #**] '^' [**status**]

- [**transit**]: - all characters in the field
 - remove dashes
- [**acct #**]: - all characters in the field
 - remove spaces and dashes
- [**check #**]: - all characters in the field
 - remove spaces and dashes
- [**status**]: - this is a programmable option that must be enabled (See Table 2-4).

ImageSafe Windows API Specifications

Fmt 3300: '=' [transit] '=' [acct #] '=' [check #] '=' [status]

- [transit]:
 - all characters in the field
 - remove dashes
- [acct #]:
 - maximum of 14 digits
 - remove spaces and dashes
- [check #]:
 - maximum of 8 digits
 - remove spaces and dashes
- [status]:
 - this is a programmable option that must be enabled (See Table 2-4).

Fmt 34xx: [transit] [acct #] [zero fill]

- [transit]:
 - all characters in the field
 - remove dashes
- [acct #]:
 - all characters in the field
 - remove spaces and dashes
- [zero fill]:
 - zero filled up to xx; xx must be greater than 00

Fmt 3500: MA [aux] B [epc] C [tran] D [acct] E [chk] F [tpc] G [amt]

This format is defined specifically for Target Test Checks. A description of the Target Test Check must be loaded in the exception table.

- [aux], [epc], [tran], [chk], [tpc], [amt]:
 - all characters in the field
 - keep spaces and dashes
- [acct]:
 - all characters in the field
 - keep spaces and remove dashes

Fmt 36xx: Read OK : [transit] [acct #] [check #] '/'
Read error: '0' '/'

- [transit]:
 - all characters in the field
 - remove spaces and dashes
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - remove spaces and dashes
- [check #]:
 - always 6 characters, zero filled
 - remove spaces and dashes

Fmt 37xx: [ABA] [chk dgt] [acct #]

- [ABA], [chk dgt]:
 - all characters in the field
 - keep spaces and dashes
- [acct #]:
 - work with characters in the acct field only
 - window of xx characters; xx must be greater than 00
 - remove spaces and dashes

Fmt 38xx: 'T' [transit] 'A' [acct #] 'C' [check #]

- [transit]:
 - all characters in the field
 - keep dashes
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - include leading characters
 - keep spaces and dashes
- [check #]:
 - all characters in the field

Fmt 39xx: [transit] <CR> [acct #]

- [transit]:
 - all characters in the field
 - remove dashes
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - remove spaces and keep dashes

Fmt 40xx: [country code] [transit] [acct #]

- [country code]:
 - '1' for US checks
 - '2' for Canadian checks
- [transit]:
 - all characters in the field
 - remove dashes
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - remove spaces and dashes

Fmt 4100: 'S' 'T' [transit] 'A' [acct #] 'C' [check #]

- [transit]:
 - all characters in the field
 - remove dashes
- [acct #]:
 - all characters in the field
 - place a slash ('/') after 10th character
 - if 10 characters or less, precede with a slash ('')
 - remove spaces and dashes
- [check #]:
 - always 6 characters, zero filled
 - remove spaces and dashes

ImageSafe Windows API Specifications

Fmt 42xx: US check : [transit] [acct #]

Can check: '9' [transit] [acct #]

- [transit]:
 - all characters in the field
 - remove dashes
- [acct #]:
 - always xx characters; zero filled;
when xx=00 all characters are sent.
 - remove spaces and dashes

Fmt 43xx: [check #] <CR> <CR> [transit] <CR> [acct #]

- [check #]:
 - maximum of 6 digits
 - remove spaces and dashes
- [transit]:
 - all characters in the field
 - remove dashes
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - remove spaces and dashes

Fmt 44xx: [transit] [acct #]

- [transit]:
 - all characters in the field
 - if Canadian check, replace dash with a space
- [acct #]:
 - always xx characters, trailing spaces,
when xx=00 all characters are sent
 - remove spaces and dashes

Fmt 45xx: [transit] <CR> [acct #] <CR> [check #]

- [transit]:
 - all characters in the field
 - remove dashes
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - remove spaces, dashes and leading zeros
- [check #]:
 - all characters in the field

Fmt 46xx: [transit] [acct #] [check #]

- [transit]:
 - all characters in the field
 - remove dashes
- [acct #]:
 - always xx characters, zero filled;
when xx=00 all characters are sent
 - remove spaces and dashes
- [check #]:
 - always 6 characters, zero filled
 - remove spaces and dashes

Fmt 47xx: [transit] 'T' [acct #] 'A' [check #]

- [transit]:
 - all characters in the field
 - remove dashes
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - remove spaces and dashes
- [check #]:
 - all characters in the field

Fmt 48xx: [transit] 'T' [acct #] 'A'

- [transit]:
 - all characters in the field
 - remove dashes
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - remove spaces and dashes

Fmt 49xx: [transit] '/* [acct #] /* [check #] /* [check type]

- [transit]:
 - always 9 characters, zero filled
 - remove dashes
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - remove spaces and dashes
- [check #]:
 - maximum of 9 digits
- [check type]: - personal checks ('1'); commercial checks ('2')

Fmt 50xx: 'T' [transit] 'T' 'O' [acct #] 'O' [check #]

- [transit]:
 - all characters in the field
 - remove dashes
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - remove spaces and dashes
- [check #]:
 - all characters in the field

Fmt 51xx: '=' [transit] '=' [acct #] '='

- [transit]:
 - all characters in the field
 - remove dashes
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - remove spaces and dashes

ImageSafe Windows API Specifications

Fmt 52xx: 'T' [transit] 'T' [acct #] 'A' [check #]

- [transit]: - all characters in the field
- remove dashes
- [acct #]: - maximum of xx characters; when xx=00 all characters are sent
- remove spaces and dashes
- [check #]: - all characters in the field
- remove dashes and spaces

Fmt 53xx: '/' [transit] '/' [acct #] '/' [check #] '/' [tpc] '/' [status] '/'

- [transit]: - all characters in the field
- remove dashes
- [acct #]: - maximum of xx characters; when xx=00 all characters are sent
- remove spaces and dashes
- [check #]: - all characters in the field
- [tpc]: - all characters in the field
- [status]: - this is a programmable option that must be enabled (See Table 2-4)

Fmt 54xx: [transit] [acct #] [check #] [status]

- [transit]: - always 12 characters, zero filled
- remove dashes
- [acct #]: - always xx characters, zero filled;
when xx=00 all characters are sent
- remove spaces and dashes
- [check #]: - always 12 characters, zero filled
- remove dashes and spaces
- [status]: - this is a programmable option that must be enabled (See Table 2-4)

Fmt 55xx: 'C' '/' [acct #] '/' [transit] '/' [check #] '/' 0000000000

- [acct #]: - always xx characters, zero filled;
when xx=00 all characters are sent
- remove spaces and dashes
- [transit]: - all characters in the field
- remove dashes
- [check #]: - always 6 characters, zero filled
- remove dashes and spaces

Fmt 56xx: [transit] <CR> [acct #] <CR> [check #] <CR> [amount]

- [transit]:
 - all characters in the field
 - remove dashes
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - remove spaces and dashes
- [check #]:
 - all characters in the field
 - remove dashes and spaces
- [amount]:
 - all characters in the field
 - remove dashes and spaces

Fmt 57xx: [acct #] <CR> [amount]

- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - remove spaces and dashes
- [amount]:
 - all characters in the field
 - remove dashes and spaces

Fmt 58xx: [short transit] [acct #] ':'

- [transit]:
 - 3 rightmost characters
 - remove dashes
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - remove spaces and dashes

Fmt 59xx: [transit] [acct #] <TAB> [check #] [amount]

- [transit]:
 - all characters in the field
 - remove dashes
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - remove spaces and dashes
- [check #]:
 - always 9 characters, zero filled
 - remove dashes and spaces
- [amount]:
 - all characters in the field
 - remove dashes and spaces
 - insert decimal point ('.') before 2nd rightmost digit

ImageSafe Windows API Specifications

Fmt 60xx: [transit] '/* [acct #] /* [check #] /* [check type]

- [transit]: - all characters in the field
- remove dashes
- [acct #]: - maximum of xx characters; when xx=00 all characters are sent
- remove spaces and dashes
- [check #]: - maximum of 10 characters
- remove spaces and dashes
- if no check #, remove preceding slash ('/')
- [check type]: - personal checks ('1'); commercial checks ('2')

Fmt 61xx: [transit] <TAB> [acct #] <TAB> [check #] <TAB>

- [transit]: - all characters in the field
- remove dashes
- [acct #]: - maximum of xx characters; when xx=00 all characters are sent
- remove spaces, dashes and leading zeros
- [check #]: - all characters in the field

Fmt 62xx: 'T' [transit] 'T' [acct #] 'A' [check #] 'S' [status]

- [transit]: - all characters in the field
- remove dashes
- [acct #]: - maximum of xx characters; when xx=00 all characters are sent
- remove spaces and dashes
- [check #]: - all characters in the field
- remove dashes and spaces
- [status]: - this is a programmable option that must be enabled (See Table 2-4).

Fmt 63xx: [transit] [acct #] [check #]

- [transit]: - all characters in the field
- remove dashes
- [acct #]: - maximum of xx characters; when xx=00 all characters are sent
- remove spaces and dashes
- [check #]: - always 4 characters, zero filled
- remove spaces and dashes

Fmt 64xx: [transit] [acct #] [check #] [amount]

- [transit]:
 - all characters in the field
 - keep dashes
- [acct #]:
 - always xx characters, trailing spaces;
when xx=00 all characters are sent
 - keep spaces and dashes
- [check #]:
 - always 6 characters (N is on quick-init check), trailing spaces
 - remove spaces and dashes
- [amount]:
 - all characters in the field
 - remove spaces and dashes
 - insert decimal point ('.') before 2nd rightmost digit

Fmt 65xx: '!' [transit] '/' [acct #] '/' [check #] '/' [amount]

- [transit]:
 - all characters in the field
 - remove dashes
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - remove spaces and dashes
- [check #]:
 - all characters in the field
 - remove dashes and spaces
- [amount]:
 - all characters in the field
 - remove dashes and spaces

Fmt 66xx: [transit] [acct #] <CR> '7' '1' <CR>

- [transit]:
 - all characters in the field
 - keep dashes
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - remove spaces and dashes

Fmt 67xx: <CR> <CR> [check #]

- [check #] :
 - maximum of xx characters; when x=00 all characters are sent
 - remove spaces and dashes

ImageSafe Windows API Specifications

Fmt 68xx: [transit] <TAB> [acct #] <TAB> [check #] <TAB> [amount] <TAB>

- [transit]:
 - all characters in the field
 - remove dashes
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - remove spaces and dashes
- [check #]:
 - all characters in the field
 - remove dashes and spaces
- [amount]:
 - all characters in the field
 - remove dashes, spaces and leading zeros
 - insert decimal point ('.') before 2nd rightmost digit

Fmt 69xx: Read OK : [transit] [acct #] [check #]

Read error: '0' '/'

- [transit]:
 - all characters in the field
 - remove dashes
- [acct #]:
 - always xx characters, trailing spaces;
when xx=00 all characters are sent
 - remove spaces and dashes
- [check #]:
 - always 6 characters, zero filled
 - remove dashes and spaces

Fmt 70: [transit] ',' [acct #] ',' [check #] ',' [amount]

- [transit]:
 - all characters in the field
 - keep dashes
- [acct #]:
 - always N characters (N is on quick-init check), space filled
 - remove spaces and dashes from the account
- [check #]:
 - always 8 characters, zero filled
 - remove dashes and spaces
- [amount]:
 - all characters in the field
 - remove dashes and spaces
 - if amount is not present, remove last ','

Fmt 71: [acct #] '?' [check #]

- [acct #]:
 - work with a window of N characters in the acct field
 - always N characters (N is on quick-init check), zero filled
 - remove spaces and dashes
- [check #]:
 - maximum of 4 characters
 - remove spaces and dashes

Fmt 72: [transit] <TAB> [acct #]

- [transit]:
 - all characters in the field
 - remove dashes
- [acct #]:
 - maximum of N characters (N is on quick-init check)
 - remove spaces and dashes

Fmt 73: [transit] <CR> [acct #] <CR> [check #]

- [transit]:
 - all characters in the field
 - remove dashes
- [acct #]:
 - maximum of N characters (N is on quick-init check)
 - remove spaces and dashes
- [check #]:
 - all characters in the field
 - remove dashes and spaces

Fmt 74: [transit] [acct #] [check #]

- [transit]:
 - all characters in the field
 - remove dashes
- [acct #]:
 - always N characters (N is on quick-init check), zero filled
 - remove spaces and dashes
- [check #]:
 - always 8 characters, zero filled
 - remove spaces and dashes

Fmt 75xx: [transit] <CR> [acct #] <CR> [check #] <CR> [status]

- [transit]:
 - always 9 characters, zero filled
 - keep dashes; remove spaces
- [acct #]:
 - maximum of xx characters; when xx=00 all characters are sent
 - remove dashes and spaces
- [check #]:
 - maximum of 12 characters
 - remove dashes and spaces

Fmt 76xx: 'T' [transit] 'A' [acct #] 'C' [check #] 'M' [raw data]

- [transit]: - all characters in the field
 - remove dashes and spaces
- [acct #]: - maximum of xx characters; when xx=00 all characters are sent
 - remove dashes and spaces
- [check #]: - all characters in the field- remove dashes and spaces
- [raw data]: - translate MICR symbols to t,o,a,d

APPENDIX B. ERROR CODES AND MESSAGES

The following are Error Codes and Error Messages from ImageSafe device API MTXXMLMCR.dll.

Error Code	Error Message	Error Code	Error Message
0	"Success"	25	"Error connecting to the device."
1	"Unknown Error"	26	"Error device is not open."
2	"Bad Parameter"	27	"Error getting the pointer to DOM."
3	"Operation Pending"	28	"Error loading XML."
4	"Operation Failed"	29	"Error finding key number."
5	"OverFlow"	30	"Error connecting to internet."
6	"Device Not Found"	31	"Error HTTP Open."
7	"Access Denied"	32	"Error HTTP Send."
8	"Device Not Responding"	33	"Error creating event."
9	"Device Not Ready"	34	"Error DOM: creating node."
10	"Hopper Empty"	35	"Error DOM: query interface."
11	"Error Copying File"	36	"Error DOM: add key."
12	"Error Reading Check"	37	"Error DOM: append child."
13	"No Images Specified"	38	"Error DOM: get document element."
14	"No Image Found"	39	"Error DOM: get xml."
15	"No Checks to Process"	40	"Error DOM: get item."
16	"Not Enough Memory"	41	"Error DOM: get child node."
17	"Key not found"	42	"Error DOM: get base name."
18	"Section not found"	43	"Error DOM: get length."
19	"Invalid Section"	44	"Error DOM: get element by tag name."
20	"Error Bad Buffer Length"	45	"Error DOM: get text."
21	"Function not supported"	46	"Error DOM: put text."
22	"Error allocating memory"	47	"Error HTP Query Info."
23	"Request timed out."	48	"Error insufficient data."
24	"Error getting the length of the data returned from the device."	49	"Error Bad HTTP Connection"

Error Code	Error Message	Error Code	Error Message
50	"Error Get Zero Content Length"		
51	"Error Bad Device Name"		
52	"Error Bad Doc Info Buffer"		
53	"Error Bad Section Name"		
54	"Error Bad Key Name"		
55	"Error Bad Value Buffer"		
56	"Error Bad Buffer Length"		
57	"Error Bad Query Parameter"		
58	"Error Bad Image Name"		
59	"Error Bad Buffer"		
60	"Error Bad Buffer Size"		
61	"Error Bad Connect Request Timeout."		
62	"Error Insufficient Disk space."		
63	"Error MSXML Not Found."		
64	"Error Query Content failed."		
65	"Error Internet Connection failed."		
66	"Error Bad IP or Domain name."		
67	"Error USB Get Data Failed."		
68	"Error WinInet Get Data Failed."		
69	"Error HTTP Header Not Found."		
70	"Error USB Send Request Failed."		

APPENDIX C. HOW TO PROCESS CHECKS AND GET IMAGE QUALITY ASSURANCE

Note

This procedure is only for ImageSafe Software installed with ImageScore optional feature.

The following steps describe the process of scanning a check to perform a set of tests on the scanned image to ensure the image qualifies a number of quality and usability criteria specified by the X9.37 standard:

1. Find the attached ImageSafe device by using function **MTMICRGetDevice**.
2. Use function **MTMICROpenDevice** to open the device.
3. Prepare a process recipe for the device to read the check. This process recipe specifies the feeder used to feed the check, type of image, resolution of image, and text for endorsing and/or franking, etc. The process recipe is prepared using the **MTMICRSetValue** and **MTMICRSetIndexValue** function. See Section 2, **MTMICRSetValue** for more information.
4. The Image QA tests are performed on black & white images only. To get the black & white image, the process must have “BW” as the value for **ImageColor** key. The valid file type for a black & white image is a “TIF”.
5. The Image QA tests are performed on the front side and back side of the check. The process recipe, therefore, must specify a value of 2 or more for the **Number** key.
6. The process recipe is sent to the device using the function **MTMICRProcessCheck**. ImageSafe reads the check with the given process recipe and returns the results to the Host application. The result is stored in the third parameter of the **MTMICRProcessCheck** function. The result contains only information of the process and information of the device. Information such as size of scanned images and image identifier are included. It does not contain scanned data.
7. After ImageSafe reads the check, images are retrieved from the device. The image information can be found in the buffer specified in the third parameter of **MTMICRProcessCheck** function, when the function is returned. This buffer is contained in the **ImageInfo** section. The **ImageInfo** section contains key/value pairs consisting of **ImageSize** and **ImageURL**. The value of a key **ImageURL** is the ID of an image. The **MTMICRGetValue** and **MTMICRGetIndexValue** function are used to retrieve the value of image ID and the size of an image from the **ImageInfo** section.
8. Images are retrieved using function **MTMICRGetImage** or **MTMICRGetImages**.
9. When images are ready to test, the process for Image QA Tests can start. The operation for Image QA must be setup before the tests can run. Use **IS_Initialize** function to initialize the operation. This function must be executed only once prior to running any Image QA tests.
10. Test metrics for Image QA Tests must be setup before running the tests. A default copy of “SampleSetup.iss” is installed in the installation directory. This file “SampleSetup.iss” contains

default values for all Image QA test metrics. For more information on these test metrics, see ImageScore manual (Please contact Help Desk).

11. Use function **IS_LoadSetup** to load the pre-defined setup file. When a setup file is loaded, any change to this file will not be taken into effect until you unload the old setup file. Use function **IS_DeleteSetup** to unload the old setup file then use function **IS_LoadSetup** to load the new setup file.
12. Use function **IS_LoadImage** to load the image of the front and back side of check. If the return value of this function is less than 0 then the images are not qualified for Image QA Tests. If the return value of **IS_LoadImage** equals to 0 then the image is ready to run Image QA tests.
13. Use function **IS_Run** to perform all Image QA tests. If the return value of this function is less than 0 then the tests failed to perform on the specified setup file and/or specified loaded images. If the return value of **IS_Run** function equals to 0 then the results of Image QA tests are ready for retrieval.
14. Use function **IS_GetResult** to retrieve the results of the Image QA test whether the test results in a pass or fail. This function must be executed for each type of Image QA test run.
15. When all Image QA tests are completed, use function **IS_DeleteImage** to unload the old images and to regain resources used on the old images.
16. To run tests on a new image or to rescan a failed image, go to step 3 to repeat the check processing.
17. When application is terminated, the **IS_Terminate** function must be executed once to regain resources used for Image QA operation.

INDEX

A	
API Functions	3
D	
Debugging API.....	6
DeviceCapabilities from Excella.....	75
DeviceStatus from Excella	75
DeviceUsage from Excella.....	77
E	
Error Codes and Messages	97
Examples of Key-Value Pairs	71
Requesting Four Images without Endorsement	71
F	
Format List	79
Functions	7
MTMICRCloseDevice	9
MTMICRGetDevice.....	7
MTMICRGetImage	20
MTMICRGetImages	22
MTMICRGetIndexValue	14
MTMICRGetKeyCount.....	27
MTMICRGetKeyName	30
MTMICRGetSectionCount	24
MTMICRGetSectionName.....	26
MTMICRGetTimeout	33
MTMICRGetValue	12
MTMICROpenDevice.....	8
MTMICRProcessCheck	18
MTMICRQueryInfo	15
G	
Get a Check Image, How To	6
K	
Key/Values Returned By The Device When A Check Is Processed	
MICRPARSESTS0.....	60
MICRPARSESTS1.....	61
Key-Value Pairs.....	43, 51, 65
O	
Overview	1
P	
Process Check Error Reporting	6
Process Check Options	6
Process Checks, How To	5, 101
R	
Requirements	1
Return Codes and Messages.....	54
S	
Software Flow For Check Processing.....	4